

| CHANNEL |     | VALUE   | FUNCTION   |
|---------|-----|---|--|
| 4ch     | 6ch |   |  |
| 1       | 1   | 000-255   | <b>DIMMER</b><br>0%→100%   |
|         | 2   | 000-255   | <b>DIMMER FINE</b>   |
| 2       | 3   | 000-007<br>008-015<br>016-131<br>132-139<br>140-181<br>182-189<br>190-231<br>232-239<br>240-247<br>248-255  | <b>STROBE</b><br>Close<br>Open<br>Strobe from Slow to Fast<br>Open<br>Fast Open Slow Close from Slow to Fast<br>Open<br>Slow Open Fast Close from Slow to Fast<br>Open<br>Random Strobe from Slow to Fast<br>Open  |
| 3       | 4   | 000-255   | <b>ZOOM</b><br>Narrow→Wide   |
|         | 5   | 000-255   | <b>ZOOM FINE</b>   |
| 4       | 6   | 000-029<br>030-039<br>040-049<br>050-059<br>060-069<br>070-099<br>100-109<br>110-119<br>120-122<br>123<br>124<br>125<br>126<br>127<br>128<br>129<br>130<br>131<br>132 | <b>SPECIAL FUNCTION</b><br>Null<br>Dimmer Curve: Linear<br>Dimmer Curve: Square Law<br>Dimmer Curve: Inv SQ Law<br>Dimmer Curve: S Curve<br>Null<br>Led Frequency Setting Enable<br>Led Frequency Setting Disable<br>Null<br>900Hz<br>1000Hz<br>1100Hz<br>1200Hz<br>1300Hz<br>1400Hz<br>1500Hz<br>2500Hz<br>4000Hz<br>5000Hz |

|  |  |         |                      |
|--|--|---------|----------------------|
|  |  | 133     | 6000Hz               |
|  |  | 134     | 10KHz                |
|  |  | 135     | 15KHz                |
|  |  | 136     | 20KHz                |
|  |  | 137     | 25KHz                |
|  |  | 138-199 | Null                 |
|  |  | 200-209 | Reset All            |
|  |  | 210-219 | Dimmer Speed: Fast   |
|  |  | 220-229 | Dimmer Speed: Smooth |
|  |  | 230-255 | Null                 |