

5.3 DMX512 Configuration


1/4 channel mode:

| DMX 512 Configuration | | | | | | |
|----------------------------|-------------|--------------------------------|--|---------------------|------------------|------------------------------|
| 1-CH mode | 4-CH mode | | | | | |
| | Ch1 | Ch2 | | | Ch3 | Ch4 |
| | Mode | 2-1(Line effect) | 2-2(Number) | 2-3(Letter) | Dimmer | Strobe |
| Shows | | | | | | |
| 248-255 Stand alone | 255 Auto | 248-255 Random line effect | 236-255 To count forwards 9 down to 0 from slow to fast | 247-255 Letter-Z | 255 100% 0 0% | 248-255 Open |
| 218-247 Show 8 | 248-255 | 240-247 effect30 slow to fast | 216-235 To count forwards 0 up to 9 from slow to fast | 236-246 Letter-Y | | 240-247 Auto |
| 188-217 Show 7 | 188-247 | 232-239 effect 29 slow to fast | 196-215 Number-9 | 229-237 Letter-X | 232-239 | 232-239 Open |
| 158-187 Show 6 | 188-247 | 224-231 effect 28 slow to fast | 176-195 Number-8 | 220-228 Letter-W | 190-231 | 190-231 Fast open slow close |
| 128-157 Show 5 | 128-187 | 216-223 effect 27 slow to fast | 156-175 Number-7 | 211-219 Letter-V | 182-189 | 182-189 Open |
| 098-127 Show 4 | 128-187 | 208-215 effect 26 slow to fast | 136-155 Number-6 | 202-210 Letter-U | 140-181 | 140-181 Slow open fast close |
| 068-097 Show 3 | 68-127 | 200-207 effect25 slow to fast | 116-135 Number-5 | 195-201 Letter-T | 132-139 | 132-139 Open |
| 038-067 Show 2 | 68-127 | 192-199 effect24 slow to fast | 096-115 Number-4 | 184-192 Letter-S | 8-131 | 8-131 Strobe slow to fast |
| 008-037 Show 1 | 8-67 | 184-191 effect23 slow to fast | 076-095 Number-3 | 175-183 Letter-R | 0-7 | 0-7 Open |
| 000-007 Blackout | 0-7 | 176-183 effect22 slow to fast | 056-075 Number-2 | 166-174 Letter-Q | | |
| | 0 | 168-175 effect21 slow to fast | 036-055 Number-1 | 157-165 Letter-P | | |
| | | 160-167 effect20 slow to fast | 016-035 Number-0 | 148-156 Letter-O | | |
| | | 152-159 effect19 slow to fast | 000-015 No function | 139-147 Letter-N | | |
| | | 144-151 effect18 slow to fast | | 130-138 Letter-M | | |
| | | 136-143 effect17 slow to fast | | 121-129 Letter-L | | |
| | | 128-135 effect16 slow to fast | | 112-120 Letter-K | | |
| | | 120-127 effect15 slow to fast | | 103-111 Letter-J | | |
| | | 112-119 effect14 slow to fast | | 094-102 Letter-I | | |
| | | 104-111 effect13 slow to fast | | 085-093 Letter-H | | |
| | | 096-103 effect12 slow to fast | | 076-084 Letter-G | | |
| | | 088-095 effect11 slow to fast | | 067-075 Letter-F | | |
| | | 080-087 effect10 slow to fast | | 058-066 Letter-E | | |
| | | 072-079 effect09 slow to fast | | 049-057 Letter-D | | |
| | | 064-071 effect08 slow to fast | | 040-048 Letter-C | | |
| | | 056-063 effect07 slow to fast | | 031-039 Letter-B | | |
| | | 048-055 effect06 slow to fast | | 022-030 Letter-A | | |
| | | 040-047 effect05 slow to fast | | 000-021 No function | | |
| | | 032-039 effect04 slow to fast | | | | |
| | | 024-031 effect03 slow to fast | | | | |
| | | 016-023 effect02 slow to fast | | | | |
| | | 008-015 effect01 slow to fast | | | | |
| | | 000-007 no function | | | | |

9 channel mode:

| 9-CH mode | | | | | |
|--|---|---|---|-------------------|---|
| Ch1 | Ch2 | Ch3 | Ch4 | Ch5 | |
| Dimmer (LED1-5) | Dimmer (LED6-10) | Dimmer (LED11-15) | Dimmer (LED16-20) | Dimmer (LED21-25) | |
| | | | | | |
| Ch6 | Ch7 | | | Ch8 | Ch9 |
| Mode | 2-1(Line effect) | 2-2(Number) | 2-3(Letter) | Dimmer (All) | Strobe |
| 248-255 Auto 188-247 Letter A to Z (see channel 2-3) 128-187 Number 1 to 9 (see channel 2-2) 068-127 Effect (see Channel 2-1) 045-067 Dimmer All Dimmer Ch1 Control LED1.6, 11.16.21 Ch2 Control LED2.7, 12.17.22 022-044 Ch3 Control LED3.8, 13.18.23 Ch4 Control LED4.9, 14.19.24 Ch5 Control LED5.10, 15.20.25 000-021 Dimmer Ch1 Control LED1-5 Ch2 Control LED6-10 Ch3 Control LED11-15 Ch4 Control LED16-20 Ch5 Control LED21-25 | 248-255 Random line effect 240-247 effect30 slow to fast 232-239 effect 29 slow to fast 224-231 effect 28 slow to fast 216-223 effect 27 slow to fast 208-215 effect 26 slow to fast 200-207 effect25 slow to fast 192-199 effect24 slow to fast 184-191 effect23 slow to fast 176-183 effect22 slow to fast 168-175 effect21 slow to fast 160-167 effect20 slow to fast 152-159 effect19 slow to fast 144-151 effect18 slow to fast 136-143 effect17 slow to fast 128-135 effect16 slow to fast 120-127 effect15 slow to fast 112-119 effect14 slow to fast 104-111 effect13 slow to fast 096-103 effect12 slow to fast 088-095 effect11 slow to fast 080-087 effect10 slow to fast 072-079 effect09 slow to fast 064-071 effect08 slow to fast 056-063 effect07 slow to fast 048-055 effect06 slow to fast 040-047 effect05 slow to fast 032-039 effect04 slow to fast 024-031 effect03 slow to fast 016-023 effect02 slow to fast 008-015 effect01 slow to fast 000-007 no function | 236-255 To count forwards 9 down to 0 from slow to fast 216-235 To count forwards 0 up to 9 from slow to fast 196-215 Number-9 176-195 Number-8 156-175 Number-7 136-155 Number-6 116-135 Number-5 096-115 Number-4 076-095 Number-3 056-075 Number-2 036-055 Number-1 016-035 Number-0 000-015 No function | 247-255 Letter-Z 238-246 Letter-Y 229-237 Letter-X 220-228 Letter-W 211-219 Letter-V 202-210 Letter-U 193-201 Letter-T 184-192 Letter-S 175-183 Letter-R 166-174 Letter-Q 157-165 Letter-P 148-156 Letter-O 139-147 Letter-N 130-138 Letter-M 121-129 Letter-L 112-120 Letter-K 103-111 Letter-J 094-102 Letter-I 085-093 Letter-H 076-084 Letter-G 067-075 Letter-F 058-066 Letter-E 049-057 Letter-D 040-048 Letter-C 031-039 Letter-B 022-030 Letter-A 000-021 No function | | 248-255 Open 240-247 Auto 232-239 Open 190-231 Fast open slow close 182-189 Open 140-181 Slow open fast close 132-139 Open 008-131 000-007 Open |

25 channel mode:

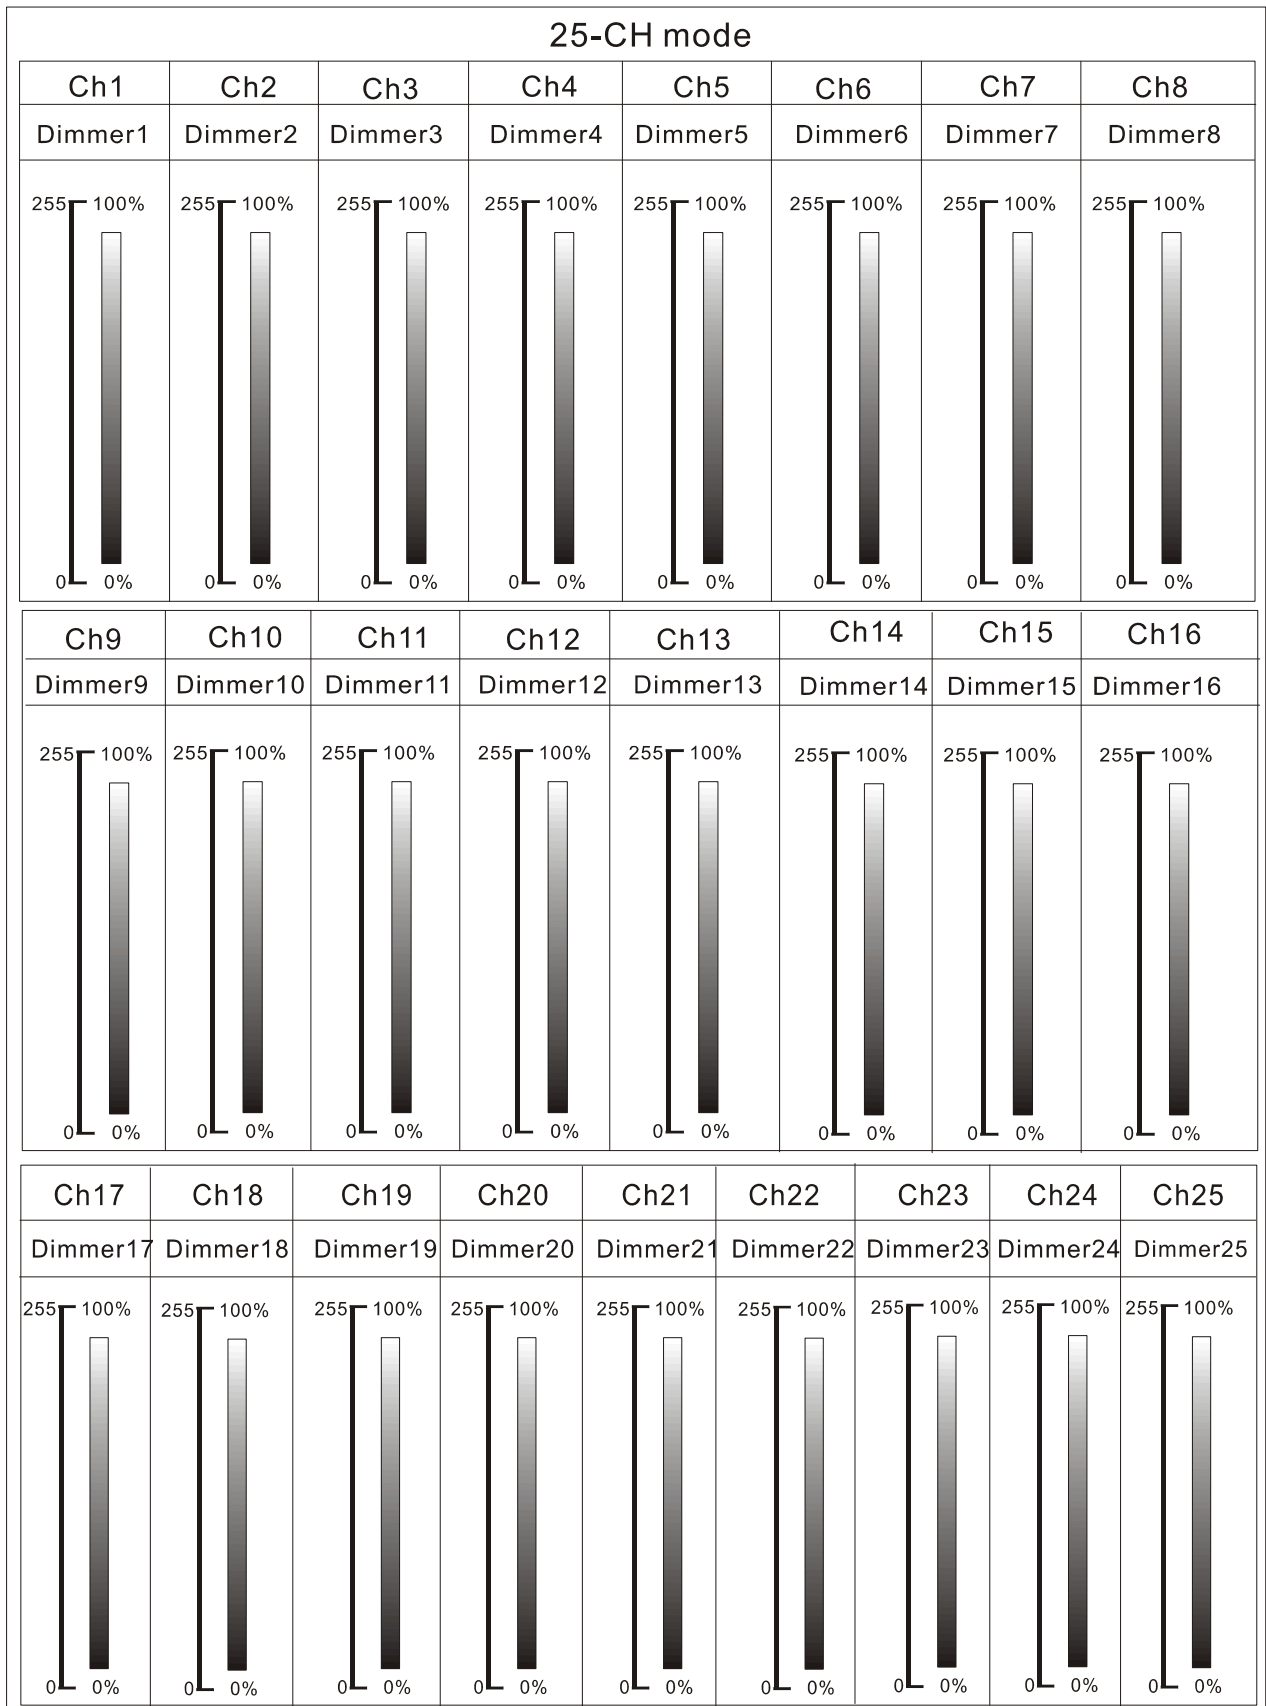

29 channel mode:

| DMX 512 Configuration | | | | | | | | | | | | |
|---|--|--|--|---|----------|----------|----------|----------|----------|----------|----------|----------|
| 29-CH mode | | | | | | | | | | | | |
| Ch1 | Ch2 | Ch3 | Ch4 | Ch5 | Ch6 | Ch7 | Ch8 | Ch9 | Ch10 | Ch11 | Ch12 | Ch13 |
| Dimmer1 | Dimmer2 | Dimmer3 | Dimmer4 | Dimmer5 | Dimmer6 | Dimmer7 | Dimmer8 | Dimmer9 | Dimmer10 | Dimmer11 | Dimmer12 | Dimmer13 |
| | | | | | | | | | | | | |
| Ch14 | Ch15 | Ch16 | Ch17 | Ch18 | Ch19 | Ch20 | Ch21 | Ch22 | Ch23 | Ch24 | Ch25 | |
| Dimmer14 | Dimmer15 | Dimmer16 | Dimmer17 | Dimmer18 | Dimmer19 | Dimmer20 | Dimmer21 | Dimmer22 | Dimmer23 | Dimmer24 | Dimmer25 | |
| | | | | | | | | | | | | |
| Ch26 | Ch27 | | | Ch28 | Ch29 | | | | | | | |
| Mode | 2-1(Line effect) | 2-2(Number) | 2-3(Letter) | Dimmer | Strobe | | | | | | | |
| <p>255 248-255 Auto</p> <p>188-247 Letter A to Z (see channel 2-3)</p> <p>128-187 Number 1 to 9 (see channel 2-2)</p> <p>68-127 Effect (see channel 2-1)</p> <p>8-67 Full On</p> <p>0-7 Blackout</p> <p>0</p> | <p>248-255 Random line effect</p> <p>240-247 effect30 slow to fast</p> <p>232-239 effect29 slow to fast</p> <p>224-231 effect28 slow to fast</p> <p>216-223 effect27 slow to fast</p> <p>208-215 effect26 slow to fast</p> <p>200-207 effect25 slow to fast</p> <p>192-199 effect24 slow to fast</p> <p>184-191 effect23 slow to fast</p> <p>176-183 effect22 slow to fast</p> <p>168-175 effect21 slow to fast</p> <p>160-167 effect20 slow to fast</p> <p>152-159 effect19 slow to fast</p> <p>144-151 effect18 slow to fast</p> <p>136-143 effect17 slow to fast</p> <p>128-135 effect16 slow to fast</p> <p>120-127 effect15 slow to fast</p> <p>112-119 effect14 slow to fast</p> <p>104-111 effect13 slow to fast</p> <p>096-103 effect12 slow to fast</p> <p>088-095 effect11 slow to fast</p> <p>080-087 effect10 slow to fast</p> <p>072-079 effect09 slow to fast</p> <p>064-071 effect08 slow to fast</p> <p>056-063 effect07 slow to fast</p> <p>048-055 effect06 slow to fast</p> <p>040-047 effect05 slow to fast</p> <p>032-039 effect04 slow to fast</p> <p>024-031 effect03 slow to fast</p> <p>016-023 effect02 slow to fast</p> <p>008-015 effect01 slow to fast</p> <p>000-007 no function</p> | <p>236-255 To count forwards 9 down to 0 from slow to fast</p> <p>216-235 To count forwards 0 up to 9 from slow to fast</p> <p>196-215 Number-9</p> <p>176-195 Number-8</p> <p>156-175 Number-7</p> <p>136-155 Number-6</p> <p>116-135 Number-5</p> <p>096-115 Number-4</p> <p>076-095 Number-3</p> <p>056-075 Number-2</p> <p>036-055 Number-1</p> <p>016-035 Number-0</p> <p>000-015 No function</p> | <p>247-255 Letter-Z</p> <p>238-246 Letter-Y</p> <p>229-237 Letter-X</p> <p>220-228 Letter-W</p> <p>211-219 Letter-V</p> <p>202-210 Letter-U</p> <p>193-201 Letter-T</p> <p>184-192 Letter-S</p> <p>175-183 Letter-R</p> <p>166-174 Letter-Q</p> <p>157-165 Letter-P</p> <p>148-156 Letter-O</p> <p>139-147 Letter-N</p> <p>130-138 Letter-M</p> <p>121-129 Letter-L</p> <p>112-120 Letter-K</p> <p>103-111 Letter-J</p> <p>094-102 Letter-I</p> <p>085-093 Letter-H</p> <p>076-084 Letter-G</p> <p>067-075 Letter-F</p> <p>058-066 Letter-E</p> <p>049-057 Letter-D</p> <p>040-048 Letter-C</p> <p>031-039 Letter-B</p> <p>022-030 Letter-A</p> <p>000-021 No function</p> | <p>255 248-255 Open</p> <p>240-247 Auto</p> <p>232-239 Open</p> <p>190-231 Fast open slow close</p> <p>182-189 Open</p> <p>140-181 Slow open fast close</p> <p>132-139 Open</p> <p>8-131 Strobe slow to fast</p> <p>0-7 Open</p> <p>0</p> | | | | | | | | |