


3. How To Set The Fixture

3.1 Control Panel

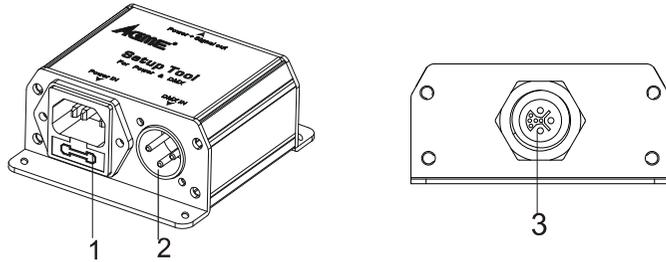

1. **Power In:** To mains power supply.
2. **DMX In:** To VD-T hand held controller.
3. **Power + Signal Out:** To lighting fixture.

4. Troubleshooting

If the fixture does not work, please check the connection of power + signal line, also measure the mains voltage on the main connector.

Innovation, Quality, Performance

VD-T XLR

User Manual

Please read the instructions carefully before use

TABLE OF CONTENTS

1. Safety Instructions	2
2. Technical Specifications	2
3. How To Set The Fixture.....	3
4. Troubleshooting	3

1. Safety Instructions



Warning

Please read the instructions carefully which includes important information about the installation, operation and maintenance.

- Please keep this User Guide for future consultation. If you sell the fixture to another user, be sure that they also receive this instruction booklet.

Cautions

- All fixtures are intact from the manufacturer, please operate follow up the user manual, artificial fault are not under guarantee repair.
- Unpack and check carefully there is no transportation damage before using the fixture.
- Do install and operate by qualified technician.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the fixture.
- Make sure there are no flammable materials close to the fixture while operating, as it is fire hazard.
- Do not operate in dirty and dusty environment, also cleaning fixtures regularly.
- Do not open the fixture as there are no user serviceable parts inside. Never try to repair the fixture by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center.

2. Technical Specifications

- Input Voltage: AC90-277V
- Fuse: 6.3A
- Dimension:
94.0 x 85.4 x 39.5mm
- Weight: 0.15 Kgs

