







5. DMX 512 Configuration

1-CH mode	3-CH mode		
Ch1	Ch1	Ch2	Ch3
Rotation	Dimmer/Strobe	Color	Rotation
250-255 Sound Active Fast 140-249  Slow 125-139 Stop Slow 15-124  Fast 0-14 Blackout	248-255 OPEN Slow 200-247  Fast 100% 8-199  0% 0-7 CLOSED	238-255 Color 15 221-237 Color 14 204-220 Color 13 187-203 Color 12 170-186 Color 11 153-169 Color 10 136-152 Color 09 119-135 Color 08 102-118 Color 07 085-101 Color 06 068-084 Color 05 051-067 Color 04 034-050 Color 03 017-033 Color 02 000-016 Color 01	250-255 Sound active 246-249 Stop Fast 135-245  Slow 121-134 Stop Slow 10-120  Fast 0-9 Stop