

4.3 DMX 512 Configuration

4/5/7 Channels Mode:

DMX512 Configurations								
4 Channels(4 Mode)				5 Channels (4D Mode)				
Ch1	Ch2	Ch3	Ch4	Ch1	Ch2	Ch3	Ch4	Ch5
RED	GREEN	BLUE	WHITE	RED	GREEN	BLUE	WHITE	DIMMER
7 Channels (4C Mode)								
Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7		
RED	GREEN	BLUE	WHITE	COLOR	DIMMER	STROBE		
				248-255 Preset color32 240-247 Preset color31 232-239 Preset color30 224-231 Preset color29 217-223 Preset color28 209-216 Preset color27 201-208 Preset color26 194-200 Preset color25 186-193 Preset color24 178-185 Preset color23 170-177 Preset color22 163-169 Preset color21 155-162 Preset color20 147-154 Preset color19 140-146 Preset color18 132-139 Preset color17 124-131 Preset color16 116-123 Preset color15 109-115 Preset color14 101-108 Preset color13 093-100 Preset color12 085-092 Preset color11 078-084 Preset color10 070-077 Preset color9 062-069 Preset color8 055-061 Preset color7 047-054 Preset color6 039-046 Preset color5 031-038 Preset color4 024-030 Preset color3 016-023 Preset color2 008-015 Preset color1 001-007 OFF		248-255 OPEN 240-247 RANDOM STROBE 232-239 OPEN SLOW CLOSE 190-231 FAST OPEN 182-189 OPEN SLOW OPEN 140-181 FAST CLOSE 132-139 OPEN 16-131 ⚡ ⚡ 8-15 OPEN 0-7 OFF		