

 
 
 
 
 
## 5.2 DMX 512 Configuration

4CH (4 MODE)				5CH (4D MODE)				
Ch1	Ch2	Ch3	Ch4	Ch1	Ch2	Ch3	Ch4	Ch5
RED	GREEN	BLUE	WHITE	RED	GREEN	BLUE	WHITE	DIMMER

7CH (4C MODE)						
Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7
RED	GREEN	BLUE	WHITE	COLOR	DIMMER	STROBE
				248-255 Preset color32 240-247 Preset color31 232-239 Preset color30 225-231 Preset color29 217-224 Preset color28 209-216 Preset color27 202-208 Preset color26 194-201 Preset color25 186-193 Preset color24 178-185 Preset color23 171-177 Preset color22 163-170 Preset color21 155-162 Preset color20 148-154 Preset color19 140-147 Preset color18 132-139 Preset color17 124-131 Preset color16 117-123 Preset color15 109-116 Preset color14 101-108 Preset color13 093-100 Preset color12 086-092 Preset color11 078-085 Preset color10 070-077 Preset color9 063-069 Preset color8 055-062 Preset color7 047-054 Preset color6 039-046 Preset color5 032-038 Preset color4 024-031 Preset color3 016-023 Preset color2 008-015 Preset color1 001-007 OFF		248-255 OPEN 240-247 RANDOM STROBE 232-239 OPEN 190-231 SLOW CLOSE 182-189 FAST OPEN 140-181 OPEN 132-139 SLOW OPEN 140-181 FAST CLOSE 132-139 OPEN 16-131 *** 8-15 ** 0-7 OPEN 0-7 OFF

# DMX Configuration

## 8CH MODE

Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7	Ch8
RED1	GREEN1	BLUE1	WHITE1	RED2	GREEN2	BLUE2	WHITE2
							

# DMX Configuration

10CH MODE

Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7	Ch8	Ch9	Ch10
RED1	GREEN1	BLUE1	WHITE1	DIMMER1	RED2	GREEN2	BLUE2	WHITE2	DIMMER2
	