

Acme®

LIGHT PANEL
TV
2000



User Manual

Please read the instruction carefully before use

CONTENTS

1. Safety Instructions	2
2. Technical Specifications	4
3 Control Panel	5
4. The Plate for Barn Door Installation	6
5. How To Set The Unit.....	6
5.1 Main Function.....	6
6. Control By Universal DMX Controller	11
6.1 DMX512 Connection	11
6.2 Address Setting	12
6.3 DMX512 Configuration.....	12
7. Troubleshooting.....	14
8. Fixture Cleaning	14

1. Safety Instructions



Please read the instruction carefully which includes important information about the installation, usage and maintenance.

WARNING

Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction manual.

Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

- Unpack and check carefully that there is no transportation damage before using the unit.
- This product is for indoor use only. Use only in a dry location.
- DO install and operate by qualified operator.
- DO NOT allow children to operate the fixture.
- Use safety chain when fixing the unit. Handle the unit by carrying its base instead of head only.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces.
- Be sure that no ventilation slots are blocked, otherwise the unit will be overheated.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Minimum ambient temperature TA: 0°C. Maximum ambient temperature TA: 40°C.
- DO NOT connect the device to any dimmer pack.
- Make sure there are no flammable materials close to the unit while operating to avoid fire hazard.
- Examine the power wires carefully; replace them immediately if there is any damage.
- Avoid any inflammable liquids, water or metal objects entering the unit. Once it happens, cut off the mains power immediately.
- DO NOT operate in dirty or dusty environment, do clean fixtures regularly.
- DO NOT touch any wire during operation as there might be a hazard of electric shock.
- Avoid power wires together twist other cables.

- Disconnect mains power before fuse replacement or servicing.
- Replace fuse only with the same type.
- In the event of serious operating problem, stop using the unit immediately.
- Never turn on and off the unit time after time.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
- DO NOT open the unit as there are no user serviceable parts inside.
- Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center if needed.
- Disconnect the mains power if the fixture is has not been used for a long time.
- DO use the original packing materials before transporting it again.
- DO NOT look directly at the light while the LED is on.
- DO NOT start on the unit without LED enclosure or when housing is damaged.

Installation:

The fixture should be mounted via its Omega Quick Release Clamp bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating and make sure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the fixtures weight. Always use a safety cable that can hold 12 times of the weight of the fixture when installing.

The equipment must be installed by professionals. It must be installed in a place where is out of the reach of people and no one can pass by or under it.

2. Technical Specifications

Power Voltage:

AC 100~240V, 50/60Hz

Power Consumption:

210W

Light Source:

480pcs 0.5W CW LED (CW)

480pcs 0.5W WW LED (WW)

Color Temperature:

5600±250K (CW)

3200±150K (WW)

Beam Angle:

110°

Optical:

CRI: CW≥94, WW≥95

CQS: CW≥94, WW≥94

TLCI: CW≥95, WW≥95

Control:

DMX Channel: 1/2A/2B/3 Channels

Control Mode: DMX, Primary/Secondary, Art-Net

Firmware Upgrade: Update via DMX link

Construction:

Display: LCD display

Data In/Out: 5-pin XLR (3-pin XLR is optional)

Power In/Out: Power Connector in

Protection Rating: IP20


Features:

With outstanding floodlight and soft light, TV LIGHT PANEL 2000 are widely applied to photographic studio, TV station, conference room, shopping mall; Access to battery.


Dimension/Weight:

668x148x491mm, 13kgs


26.3"x5.8"x19.3" in, 28.7lbs

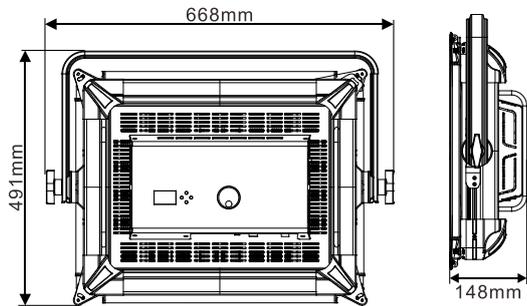

Photometrics Diagram:

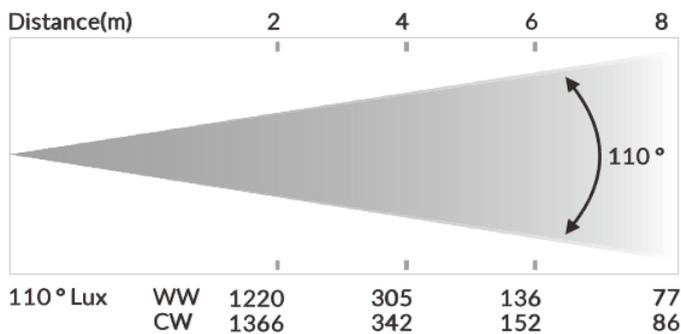

3 Control Panel

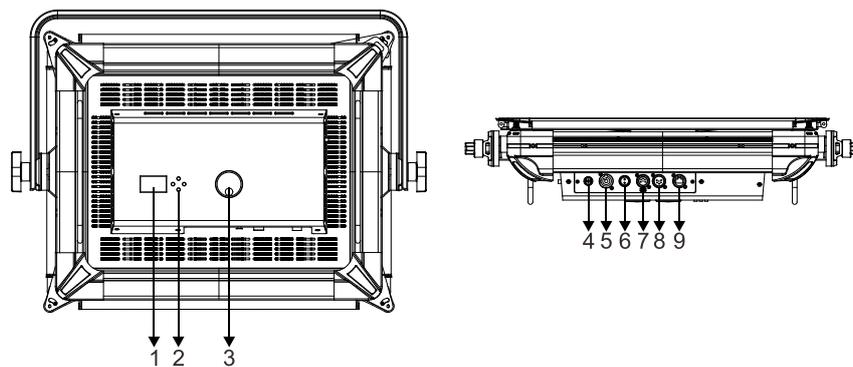


1. Display: To show the various menus and the selected function

2. Button:


MENU	To enter into move backward or leave the menu
▲ UP	To go backward to move up in the menu
▼ DOWN	To go forward to move down in the menu
ENTER	To perform the desired functions

- 3. **DIMMER:** Adjust the dimmer
- 4. **FUSE(T 5A):** Protects the unit from over-voltage or short circuit
- 5. **MAINS IN:** To connect to supply power
- 6. **BATTERY (DC 48V):** Connects to external battery
- 7. **DMX OUT:** Use 5-pin XLR cable to link the next units (3-pin XLR is optional)
- 8. **DMX IN:** Use 5-pin XLR cable to link the unit and DMX controller (3-pin XLR is optional)
- 9. **ETHERNET:** Transfers fixture's information to a main controller

4. The Plate for Barn Door Installation

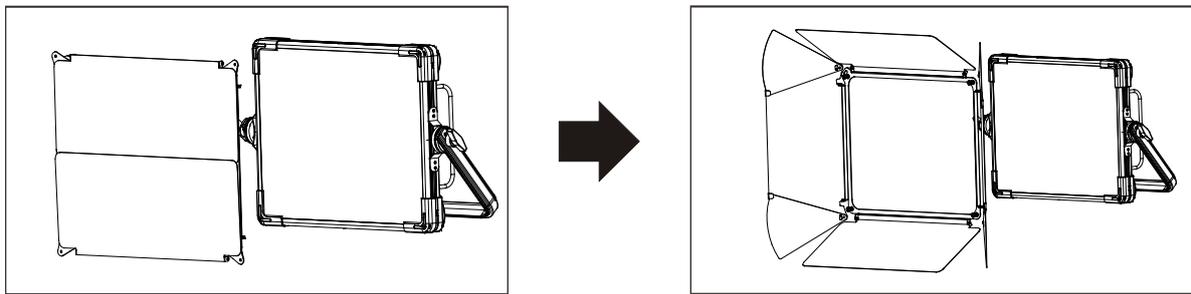

At first, please push the barn door by hand.

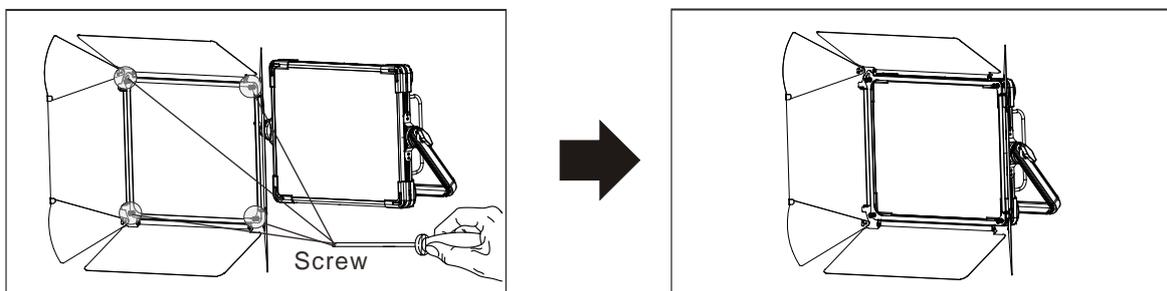


Secondly, please put the Barn Door into the unit, to fasten the screws of the slot, then finish the barn door installation.

5. How To Set The Unit

5.1 Main Function

Turn on the unit, press the MENU button into menu mode, and press the UP/DOWN button until the required function is shown on the monitor. Select the function by the ENTER button. Use the UP/DOWN button to choose the submenu, press the ENTER button to store and automatically return to the last menu. Press the MENU button or let the unit idle 30 seconds to exit menu mode.

The main functions are shown below:

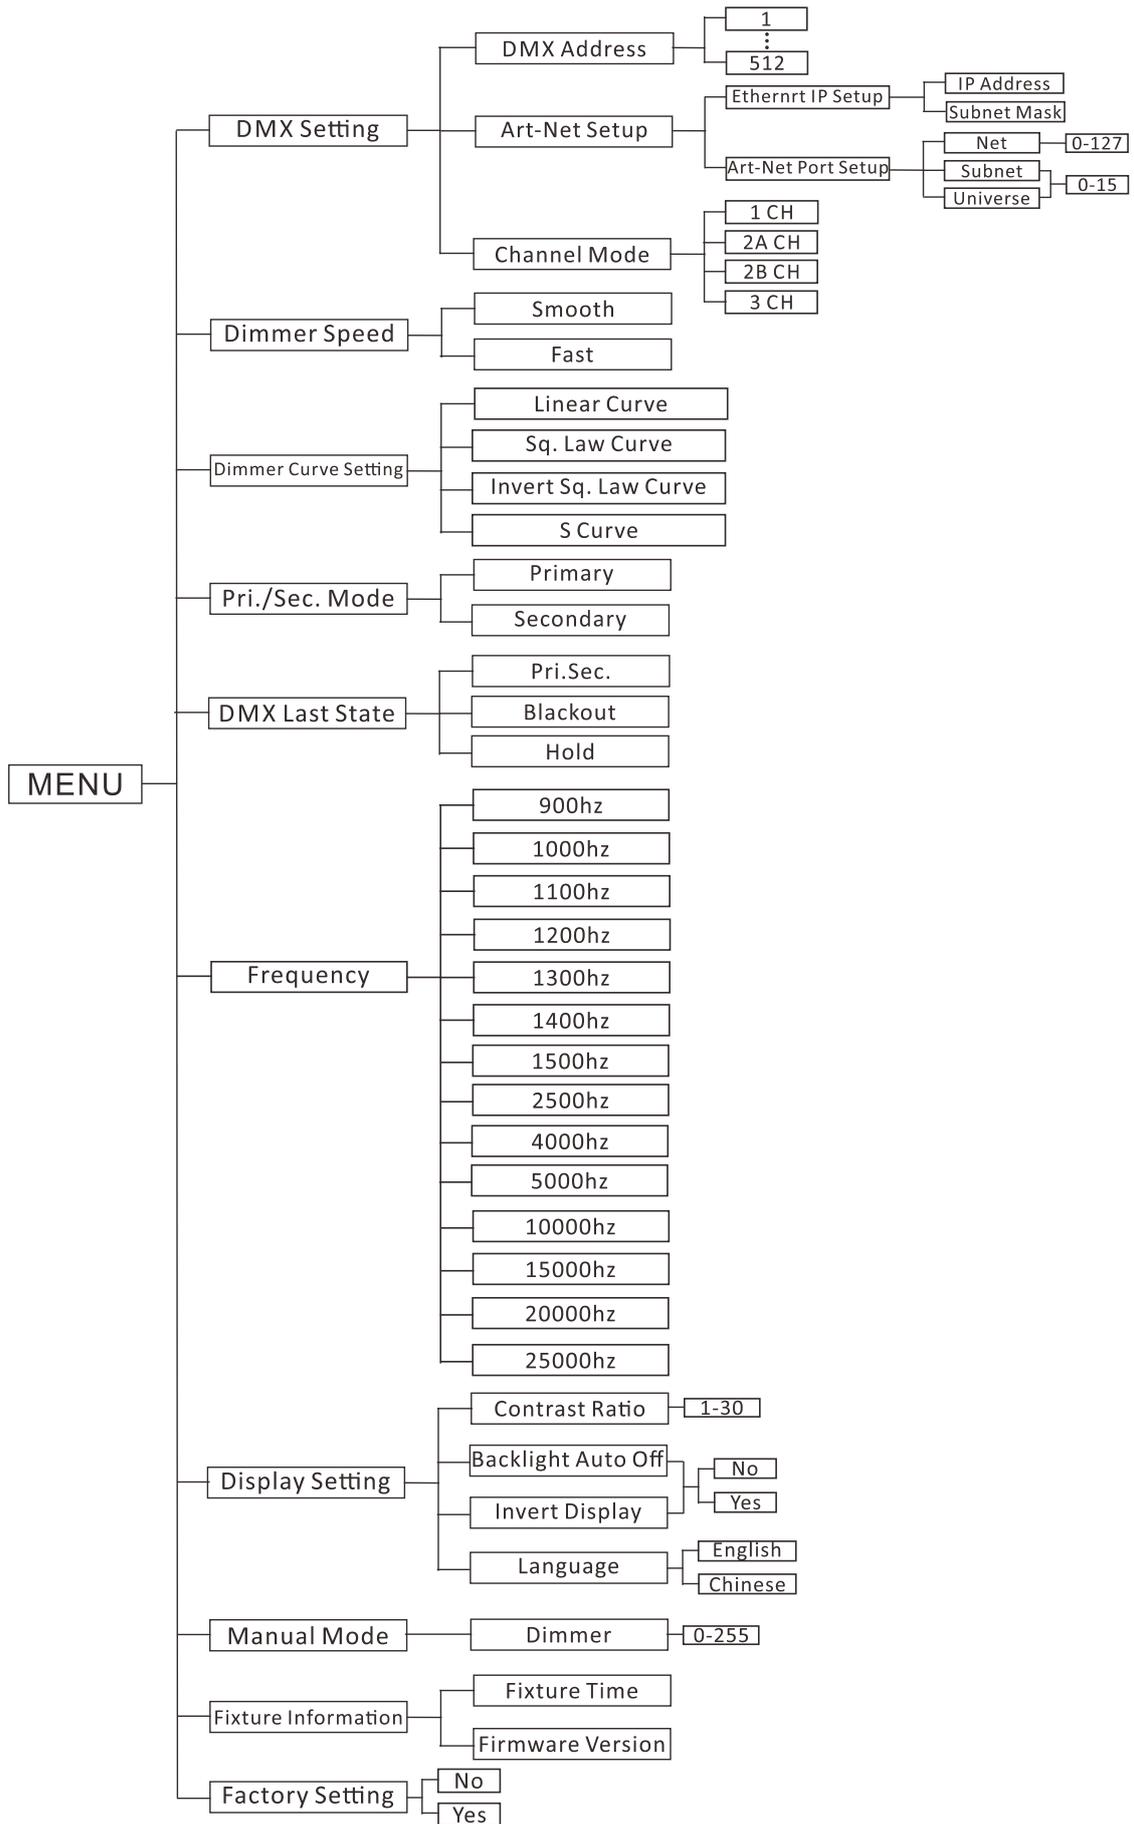

DMX Setting

To select **DMX Setting**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **DMX Address, Art-Net Setup** or **Channel Mode**.

DMX Address

To select **DMX Address**, press the **ENTER** button to confirm. Use the **UP/DOWN** button to adjust the address from **001** to **512**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Art-Net Setup

To select **Art-Net Setup**, press the **ENTER** button to confirm. Use the **UP/DOWN** button to select **Ethernet IP Setup** or **Art-Net Port Setup**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Channel Mode

To select **Channel Mode**, press the **ENTER** button to confirm. Use the **UP/DOWN** button to select **1 CH, 2A CH, 2B CH** or **3 CH**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.


Dimmer Speed

To select **Dimmer Speed**, press the **ENTER** button to confirm. Use the **UP/DOWN** button to select **Smooth** or **Fast**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.


Dimmer Curve Setting

To select **Dimmer Curve Setting**, press the **ENTER** button to confirm. Use the **UP/DOWN** button to select **Linear Curve, Sq. Law Curve, Invert Sq. Law Curve** or **S Curve**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.


Dimmer Modes

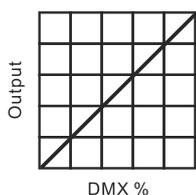


Optically Linear

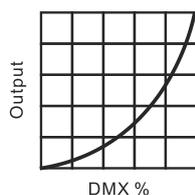

Square Law

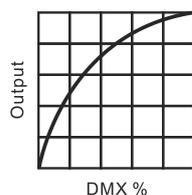

Inverse Square Law

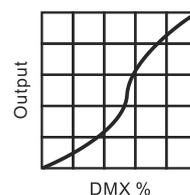

S-curve

Optically Linear: The increase in light intensity appears to be linear as DMX value is increased.

Square Law: Light intensity control is finer at low levels and coarser at high levels.

Inverse Square Law: Light intensity control is coarser at low levels and finer at high levels.

S-Curve: Light intensity control is finer at low levels and high levels and coarser at medium levels.

Pri./Sec. Mode

To select **Pri./Sec. Mode**, press the **ENTER** button to confirm. Use the **UP/DOWN** button to select **Primary** or **Secondary**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

DMX Last State

To select **DMX Last State**, press the **ENTER** button to confirm. Use the **UP/DOWN** button to select **Pri.Sec., Blackout** or **Hold**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Frequency

To select **Frequency**, press the **ENTER** button to confirm. Use the **UP/DOWN** button to select **900hz, 1000hz, 1100hz, 1200hz, 1300hz, 1400hz, 1500hz, 2500hz, 4000hz, 5000hz, 10000hz, 15000hz, 20000hz** or **25000hz**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Display Setting

To select **Display Setting**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **Contrast Ratio, Backlight Auto Off, Invert Display** or **Language**.

Contrast Ratio

Select **Contrast Ratio**, press the **ENTER** button to confirm, present mode will blink on the display, use the **UP/DOWN** button to adjust the contrast ratio from **1** to **30**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Backlight Auto Off

Select **Backlight Auto Off**, press the **ENTER** button to confirm, present mode will blink on the display, use the **UP/DOWN** button to select **No** or **Yes**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Invert Display

Select **Invert Display**, press the **ENTER** button to confirm, present mode will blink on the display, use the **UP/DOWN** button to select **No** (normal display) or **Yes** (invert display), press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Language

Select **Language**, press the **ENTER** button to confirm, present mode will blink on the display, use the **UP/DOWN** button to select **English** or **Chinese**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Manual Mode

To select **Manual Mode**, press the **ENTER** button to confirm. Use the **UP/DOWN** button to select **Dimmer**, press the **ENTER** button to store. Use the **UP/DOWN** button to adjust the value from **0** to **255**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Fixture Information

To select **Fixture Information**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **Fixture Time** or **Firmware Version**.

Fixture Time

Select **Fixture Time**, press the **ENTER** button to confirm, fixture use time will show on the display, press the **MENU** button to exit.

Firmware Version


Select **Firmware Version**, press the **ENTER** button to confirm, firmware version will show on the display, press the **MENU** button back to exit.

Factory Setting

Select **Factory Setting**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **No**(normal) or **Yes**(the fixture will reset to factory settings), press **ENTER** button to store. Press the **MENU** button to exit.

6. Control By Universal DMX Controller

6.1 DMX512 Connection

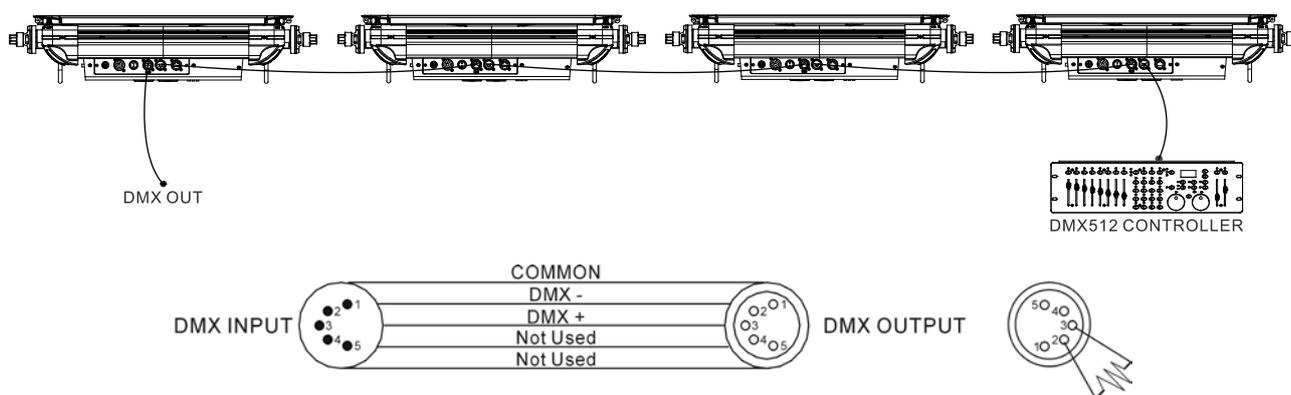

1. At last unit, the DMX cable has to be terminated with a terminator. Solder a 120-ohm 1/4W resistor between pin 2(DMX-) and pin 3(DMX+) into a 3-pin XLR-plug and plug it in the DMX-output of the last unit.
2. Connect the unit together in a “daisy chain” by XLR plug cable from the output of the unit to the input of the next unit. The cable cannot be branched or split to a “Y” cable. DMX 512 is a very high-speed signal. Inadequate or damaged cables, soldered joints or corroded connectors can easily distort the signal and shut down the system.
3. The DMX output and input connectors are pass-through to maintain the DMX circuit, when one of the units’ power is disconnected.
4. Each lighting unit needs to have a DMX address to receive the data by the controller. The address number is between 1-512.
5. The end of the DMX 512 system should be terminated to reduce signal errors.
6. 3 pin XLR connectors are more popular than 5 pins XLR.
 - 3 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)
 - 5 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+), Pin4, Pin5 not used.

6.2 Address Setting

If you use a universal DMX controller to control the units, you have to set DMX address from 1 to 512 so that the units can receive DMX signal.

Press the MENU button to enter menu mode, select DMX Setting, press the ENTER button to confirm, use the UP/DOWN button to select DMX Address, press the ENTER button to confirm, the present address will be blinking on the display, use the UP/DOWN button to adjust the address from 001 to 512, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle 30 seconds to exit menu mode.

Please refer to the following diagram to address your DMX512 channel for the first 4 units.

Channel mode	Unit 1 Address	Unit 2 Address	Unit 3 Address	Unit 4 Address
1 channels	1	2	3	4
2A channels	1	3	5	7
2B channels	1	3	5	7
3 channels	1	4	7	10

6.3 DMX512 Configuration

Please refer to below configurations to control the fixtures

Attentions:

1. The unit will maintain the last condition until reset if you cut-off the DMX signal.
2. For the channel Function, keep the value for about 3 seconds, then the corresponding function will take into effect.

1 Channels (Mode 1):

CHANNEL	VALUE	FUNCTION
1	000-255	DIMMER 0%→100%

2A Channels (Mode 2):

CHANNEL	VALUE	FUNCTION
1	000-255	DIMMER 0→100%
2	000-031 032-063 064-095 096-127 128-159 160-191 192-223 224-255	STROBE Off On Strobe: Slow to Fast On Strobe Pulse: Fast to Slow On Random Strobe On

2B Channels (Mode 3):

CHANNEL	VALUE	FUNCTION
1	000-255	DIMMER 0%→100%
2	000-255	DIMMER FINE

3 Channels (Mode 4):

CHANNEL	VALUE	FUNCTION
1	000-255	DIMMER 0%→100%
2	000-255	DIMMER FINE
3	000-031 032-063 064-095 096-127 128-159 160-191 192-223 224-255	STROBE Off On Strobe: Slow to Fast On Strobe Pulse: Fast to Slow On Random Strobe On

7. Troubleshooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

A. The unit does not work and no light

1. Check the connect power and main fuse.
2. Measure the mains voltage on the main connector.
3. Check the power on LED to see if it can be light up or not.

B. Not responding to DMX controller

1. Check DMX connectors, cables to see if they are linked properly.
2. Check the address settings and DMX polarity.
3. If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the unit or the previous one.
4. Try to use another DMX controller.
5. Check to see if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.

C. One of the channels is not working well

1. The stepper motor might be damaged or the cable connected to the PCB is broken.
2. The motor's drive IC on the PCB might be out of condition.

8. Fixture Cleaning

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

- Clean with soft cloth and use normal glass to clean liquid.
- Always dry the parts carefully.
- Clean the external optics at least every 20 days.

Declaration of Conformity

We declare that our products (lighting equipments) comply with the following specification and bears CE mark in accordance with the provision of the Electromagnetic Compatibility (EMC) Directive 2014/30/EU.

EN 55032: 2015; EN 55103-2: 2009;
EN 61000-3-2: 2014; EN 61000-3-3: 2013.

&

Harmonized Standard

EN 60598-2-17: 1989+A2: 1991; EN 60598-1: 2015; EN 62471: 2008;
EN 62493: 2015; EN 62031: 2008+A1: 2013+A2: 2015.
Safety of household and similar electrical appliances
Part 1: General requirements

Innovation, Quality, Performance