




# Glamour 350Z

CM-350Z

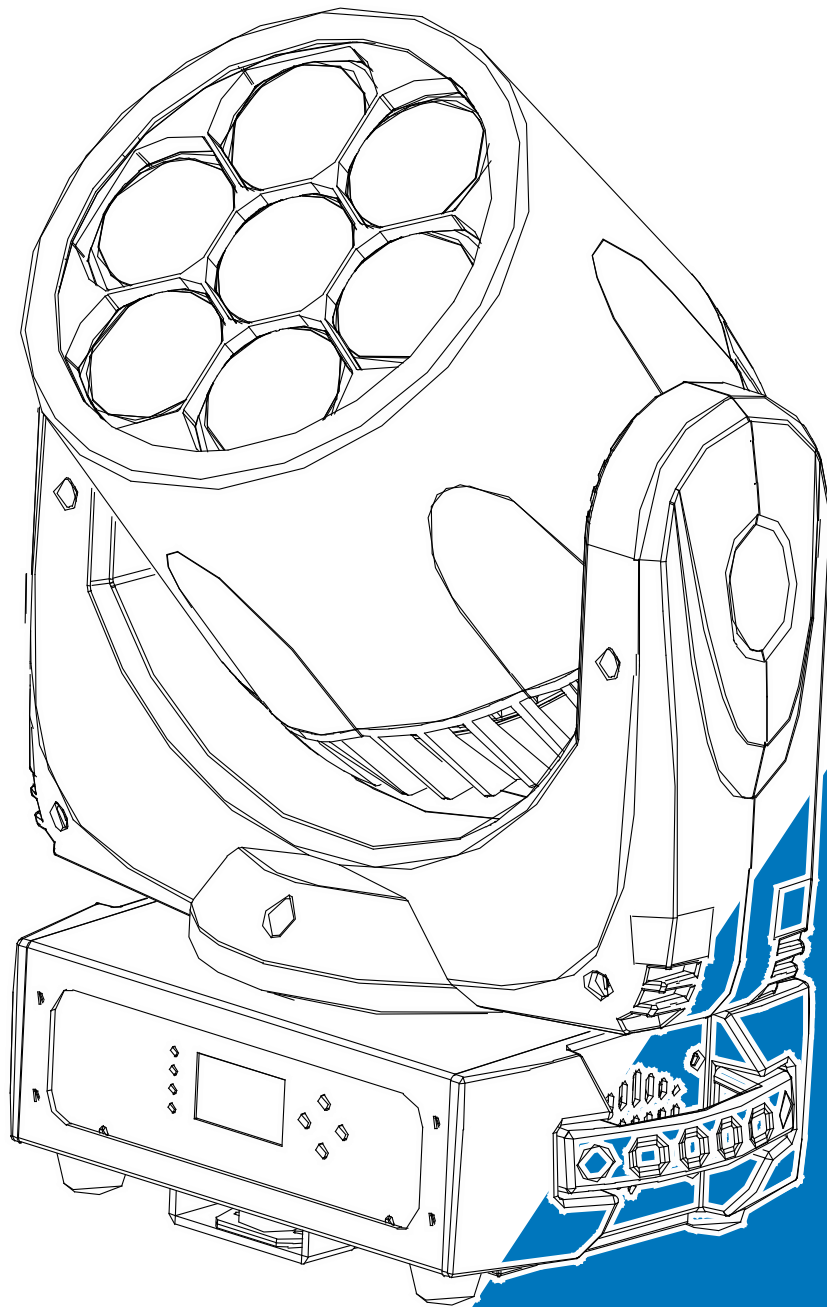

**User Manual**

Please read the instruction carefully before use

## TABLE OF CONTENTS

1. Safety Instructions.....	2
2. Technical Specifications .....	3
3. How To Set The Unit .....	4
3.1 Control Panel .....	4
3.2 Main Function .....	5
3.3 Home Position Adjust .....	13
4. Control By Universal DMX Controller.....	13
4.1 DMX 512 Connection.....	13
4.2 Address Setting.....	14
4.3 DMX 512 Configuration .....	15
5. Troubleshooting .....	21
6. Fixture Cleaning .....	22

## 1. Safety Instructions



### WARNING

Please read the instruction carefully which includes important information about the installation, usage and maintenance.

Please keep this User Manual for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.

- Unpack and check carefully there is no transportation damage before using the unit.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- The unit is for indoor use only. Use only in a dry location.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Disconnect main power before replacement or servicing.
- Make sure there are no flammable materials close to the unit while operating as it is fire hazard.
- Use safety cables when fixing this unit. DO NOT handle the unit by its head only, always carry by its base.
- Maximum ambient temperature is Ta: 40 degrees C. DO NOT operate it where the temperature is higher than this.
- Unit surface temperature may reach up to 75 degrees C. DO NOT touch the housing with bare-hands during its operation. Turn off the power and allow about 15 minutes for the unit to cool down before replacing or serving.
- In the event of a serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- DO NOT touch any wire during operation as high voltage may cause electric shock.

### Warning:

- To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or

moisture.

- The housing and lenses must be replaced if they are visibly damaged.

### **Caution:**

There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact your nearest dealer.

### **Installation:**


The fixture should be mounted via its Omega Quick Release Clamp bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating and make sure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the fixtures weight. Always use a safety cable that can hold 12 times of the weight of the fixture when installing.

The equipment must be installed by professionals. It must be installed in a place where is out of the reach of people and no one can pass by or under it.

## **2. Technical Specifications**


- ◇ Extremely small, fast and powerful LED moving beam.
- ◇ DMX Channels: 11/15/14 channels mode
- ◇ Operation modes: DMX512
- ◇ Blue LCD display for easy navigation
- ◇ Perfect for stage, theatre, TV studio, rental and discotheques
  
- ◇ **Input Voltage:** AC 100V~240V, 50/60Hz
- ◇ **Power Consumption:** 285W
- ◇ **Power Cable Daisy Chain:** 11 Fixture Max. (230V, 50Hz)  
5 Fixture Max. (120V, 60Hz)
- ◇ **Beam Angel:** 5°-50°
- ◇ **LED Source:** 7 × 30W Luminus RGBW(4in1) LEDs

- ◇ **Weight:** 10.6Kgs
- ◇ **Dimension:** 325 × 226 × 409mm

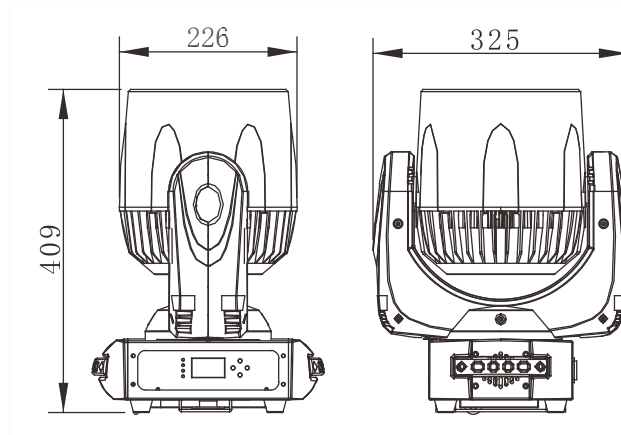

### 3. How To Set The Unit

#### 3.1 Control Panel

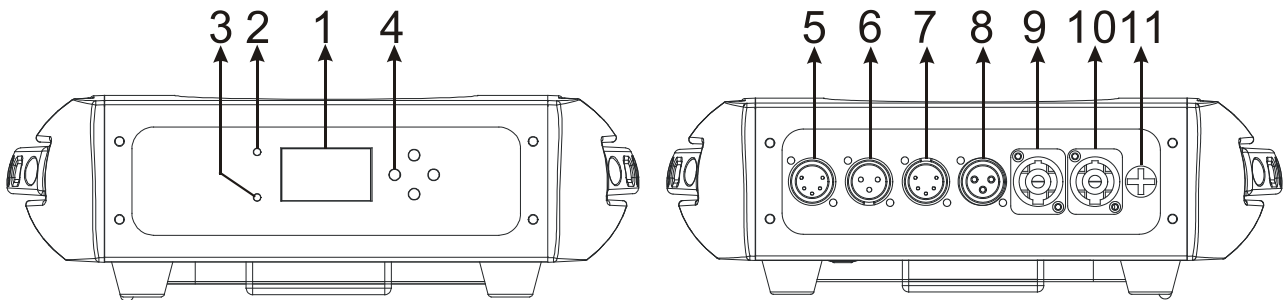

#### 1. Display:

Shows the various menus and the selected functions

#### LED:

<b>2. POWER</b>	ON	Power On
<b>3. DMX</b>	ON	DMX input present

#### 4. Button:

<b>MENU</b>	To select the programming functions
<b>▼ DOWN</b>	To go backward in the selected functions
<b>▲ UP</b>	To go forward in the selected functions
<b>ENTER</b>	To confirm the selected functions

#### 5. DMX input:

DMX512 link, use 5-pin XLR cable to link the unit and DMX controller

**6. DMX input:**

DMX512 link, use 3-pin XLR cable to link the unit and DMX controller

**7. DMX output:**

DMX512 link, use 5-pin XLR cable to link the next unit

**8. DMX output:**

DMX512 link, use 3-pin XLR cable to link the next unit

**9. Mains input:**

Connects to power supply

**10. Mains output:**

Connects to next fixture


**11. Fuse (T 6.3A):**

Protects the unit from over-voltage or short circuit

## **3.2 Main Function**

To select any of the given functions, press the **MENU** button until the required function is showing on the display. Select the function by pressing the **ENTER** button and the display will blink. Use the **DOWN/UP** buttons to change the mode. Once the required mode has been selected, press the **ENTER** button to setup, to go back to the functions without any change press the **MENU** button again. Press and hold the **MENU** button for about one second or wait for one minute to exit the menu mode.

The main functions are shown overleaf:

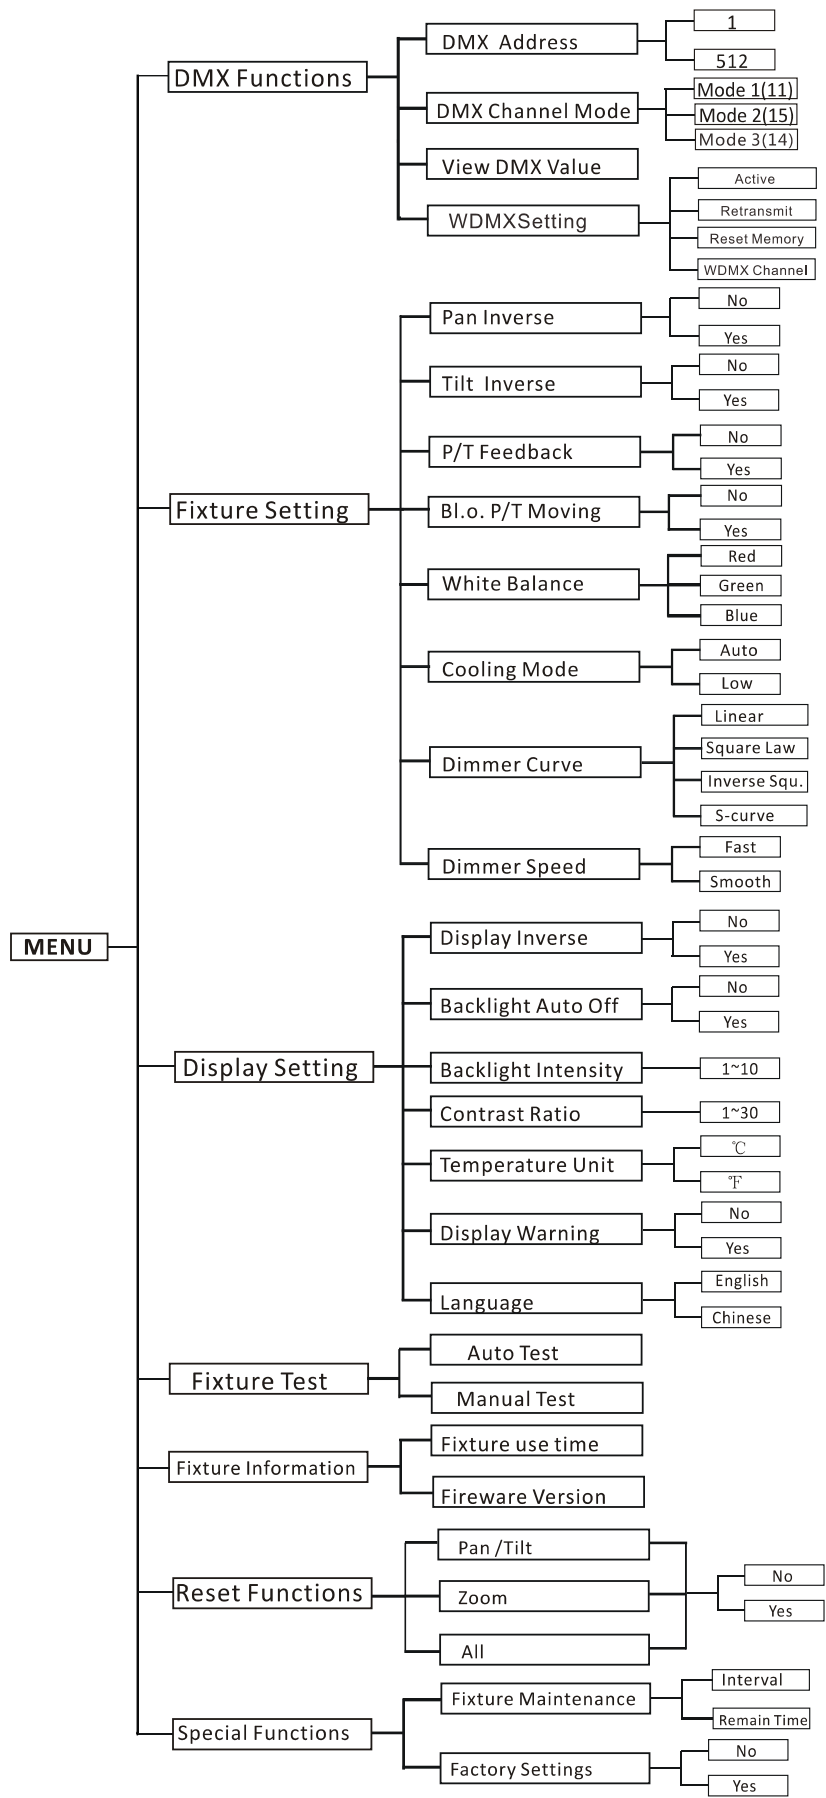

## **DMX Functions**

Enter MENU mode, select **DMX Functions**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **DMX Address**, **DMX Channel Mode** or **View DMX Value**.

### **DMX Address**

To select **DMX Address**, press the **ENTER** button to show the **DMX ADDRESS** on the display. Use the **UP/DOWN** button to adjust the address from **001** to **512**, press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### **DMX Channel Mode**

To select **DMX Channel Mode**, press the **ENTER** button to show the **DMX CHANNEL MODE** on the display. Use the **UP/DOWN** button to select **Mode 1(11)** ,**Mode 2(15)** or **Mode 3 (14)**, press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### **View DMX Value**

To select **View DMX Value**, press the **ENTER** button to show the **VIEW DMX VALUE** on the display. Use the **UP/DOWN** button to view the DMX channel values. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### **WDMX Setting**

To select **WDMX Setting**, press the **ENTER** button to show the **WDMX SETTING** on the display. Use the **UP/DOWN** button to select **Active**, **Retransmit**, **Reset Memory** or **WDMX Setting**, press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

## **Fixture Setting**

Enter MENU mode, select **Fixture Setting**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **Pan Inverse**, **Tile Inverse**, **P/T Feedback**, **BL.O. P/T Moving**, **White Balance**, **Cooling Mode**, **Dimmer Curve** or **Dimmer Speed**.

### **Pan Inverse**

To select **Pan Inverse**, press the **ENTER** button to show the **PAN INVERSE** on the display. Use



the **UP/DOWN** button to select **No** (normal) or **Yes** (pan inverse), press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

#### **Tilt Inverse**

To select **Tilt Inverse**, press the **ENTER** button to show the **TILT INVERSE** on the display. Use the **UP/DOWN** button to select **No** (normal) or **Yes** (tilt inverse), press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

#### **P/T Feedback**

To select **P/T Feedback**, press the **ENTER** button to show the **PAN/TILT FEEDBACK** on the display. Use the **UP/DOWN** button to select **No** (Pan or tilt's position will not feedback while out of step) or **Yes** (Feedback while pan/tilt out of step), press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

#### **BL.O. P/T Moving**

To select **BL.O. P/T Moving**, press the **ENTER** button to show the **BLACKOUT WHILE PAN/TILT MOVING** on the display, use the **UP/DOWN** button to select **No** (normal while pan/tilt moving) or **Yes** (blackout while pan/tilt moving), press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

#### **White Balance**

To select **White Balance**, press the **ENTER** button to show the **WHITE BALANCE** on the display, use the **UP/DOWN** button to select **Red**, **Green** or **Blue**. Once selected, press the **ENTER** button to confirm, and use the **UP/DOWN** button to adjust the value from **125** to **255**, press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.


#### **Cooling Mode**

To select **Cooling Mode**, press the **ENTER** button to show the **COOLING MODE** on the display. Use the **UP/DOWN** button to select **Auto** (Normal) or **Low** (Low speed). Once selected, press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

#### **Dimmer Curve**


To select **Dimmer Curve**, press the **ENTER** button to show the **DIMMER CURVE** on the display, use the **UP/DOWN** button to select **Linear**, **Square Law**, **Inverse Squ.** or **S-curve**. Once selected, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

## Dimmer Modes

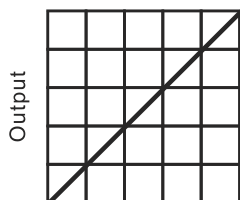


DMX %

Optically Linear

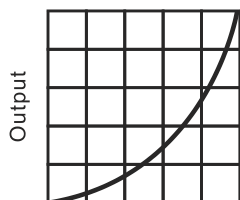


DMX %

Square Law

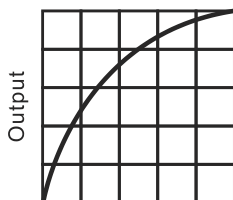

DMX %

Inverse Square Law

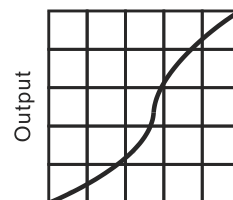

DMX %

S-curve

**Linear:** The increase in light intensity appears to be linear as DMX value is increased.

**Square Law:** Light intensity control is finer at low levels and coarser at high levels.

**Inverse Square Law:** Light intensity control is coarser at low levels and finer at high levels.

**S-cure:** Light intensity control is finer at low levels and high levels and coarser at medium levels.

### Dimmer Speed

To select **Dimmer Speed**, press the **ENTER** button to show the **DIMMER SPEED** on the display. Use the **UP/DOWN** button to select **Fast** or **Smooth**. Once selected, press the **ENTER** button to setup. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### Display Setting

Enter **MENU** mode, select **Display Setting**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **Display Inverse**, **Backlight Auto Off**, **Backlight Intensity**, **Constrast Ratio**, **Temperature unit**, **Display Warning** or **Language**.

### Display Inverse

To select **Display Inverse**, press the **ENTER** button to show the **DISPLAY INVERSE** on the display. Use the **UP/DOWN** button to select **No** (normal) or **Yes** (display inverse). Once selected, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### **Backlight Auto Off**

To select **Backlight Auto Off**, press the **ENTER** button to show the **BACKLIGHT AUTO OFF** on the display. Use the **UP/DOWN** button to select **No** (display always on) or **Yes** (display goes off one minute after exiting menu mode). Once selected, press the **ENTER** button to confirm and store. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### **Backlight Intensity**

To select **Backlight Intensity**, press the **ENTER** button to show the **BACKLIGHT INTENSITY** on the display. Use the **UP/DOWN** button to adjust the intensity from **1** (dark) to **10** (bright). Once selected, press the **ENTER** button to setup and store. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### **Contrast Ratio**

To select **Contrast Ratio**, press the **ENTER** button to show the **CONTRAST RATIO** on the display. Use the **UP/DOWN** button to adjust the intensity from **1** to **30**. Once selected, press the **ENTER** button to setup and store. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### **Temperature Unit**

To Select **Temperature Unit**, press the **ENTER** button to show the **TEMPERATURE UNIT** on the display. Use the **UP/DOWN** button to select **°C** or **°F**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### **Display Warning**

To select **Display Warning**, press the **ENTER** button to show the **DISPLAY WARNING** on the display. Use the **UP/DOWN** button to select **No** (Normal) or **Yes** (display will show the error warning when the unit went wrong), press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

### **Language**

To select **Language**, press the **ENTER** button to show the **LANGUAGE** on the display. Use the **UP/DOWN** button to select **English** or **Chinese**, press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle one minute to exit menu mode.

## **Fixture Test**

Enter **MENU** mode, select **Fixture Test**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **Auto Test** or **Manual Test**

### **Auto Test**

To select **Auto Test**, press the **ENTER** button to show the **AUTO TEST** on the display. Press the **ENTER** button, the unit will run built-in programs to automatically test pan, tilt and zoom. Press the **MENU** button back to the last menu or exit menu mode after auto test.

### **Manual Test**

To select **Manual Test**, press the **ENTER** button to show the **MANUAL TEST** on the display. Press the **ENTER** button, and then use the **UP/DOWN** button to select channel, and adjust the channel value. Once selected, press the **ENTER** button to setup, the fixture will run as the channel value indicates. Press the **MENU** button back to the last menu or exit menu mode let the unit idle one minute.

(All channels value will become 0 after exiting **Manual Test** menu)

## **Fixture Information**

Enter **MENU** mode, select **Fixture Information**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **Fixture use time** or **Firmware Version**.

### **Fixture use time**

To select **Fixture use time**, press the **ENTER** button to show the **FIXTURE USE TIME** on the display. Press the **ENTER** button, the fixture working hours will show on the display. Press the **MENU** button to exit.

### **Firmware Version**

To select **Firmware Version**, press the **ENTER** button to show the **FIRMWARE VERSION** on the display. Press the **ENTER** button and the fixture software version will show on the display. Press the **MENU** button to exit.

## **Reset Functions**

Enter **MENU** mode, select **Reset Function**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **Pan/Tilt, Zoom** or **All**.

### **Pan/Tilt**

To Select **Pan/Tilt**, press the **ENTER** button to show the **PAN/TILT** on the display. Use the **UP/DOWN** button to select **Yes** (the unit will run built-in program to reset pan and tilt to their home positions) or **No**, press the **ENTER** button to store. Press the **MENU** button to exit menu mode.

### **Zoom**

To select **Zoom**, press the **ENTER** button to show the **ZOOM** on the display. Use the **UP/DOWN** button to select **Yes** (the unit will run built-in program to reset zoom to its home positions) or **No**, press the **ENTER** button to store. Press the **MENU** button to exit menu mode.

### **All**

To select **All**, press the **ENTER** button to show the **ALL** on the display. Use the **UP/DOWN** button to select **Yes** (the unit will run built-in program to reset all motors to their home positions) or **No**, press **ENTER** button to store. Press **MENU** button to exit menu mode.

### **Special Functions**

Enter MENU mode, select **Special Functions**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **Fixture Maintenance** or **Factory Setting**.

#### **Fixture Maintenance**

To select **Fixture Maintenance**, press the **ENTER** button to show the **FIXTURE MAINTENANCE** on the display. Use the UP/DOWN button to select **Interval** or **Remain Time**.

#### **Interval**

To select **Interval**, press the **ENTER** button to confirm, the interval time will be shown on the display. Press the **MENU** button to exit.


#### **Remain Time**

To select **Remain Time**, press the **ENTER** button to confirm, the remaining time will be shown on the display. Press the **ENTER** button to confirm, use the **UP/DOWN** button to select **Exit** or **Reset time**, press the **MENU** button to exit.

#### **Factory Setting**

To select **Factory Setting**, press the **ENTER** button to show the **FACTORY SETTING** on the display. Press the **ENTER** button to confirm, use the **UP/DOWN** button to select **No** or **Yes** (the fixture will reset to factory settings and exit menu mode).


### 3.3 Home Position Adjust

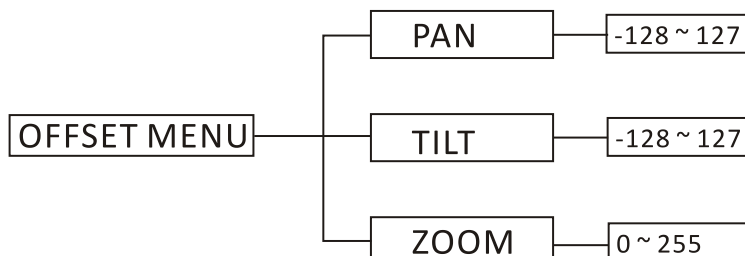


In the main functions, hold the **ENTER** button for at least 3 seconds into offset mode, use the **DOWN/UP** button up to select **Pan Offset**, **Tilt Offset** or **Zoom Offset**, and press the **ENTER** button to confirm. Use the **DOWN/UP** button to adjust the home position of the Pan, Tilt or Zoom, Once the position has been selected, press the **ENTER** button to setup, to go back to the functions without any change press the **MENU** button again. Press and hold the **MENU** button about one second or wait for about one minute to exit the menu mode.

## 4. Control By Universal DMX Controller

### 4.1 DMX 512 Connection

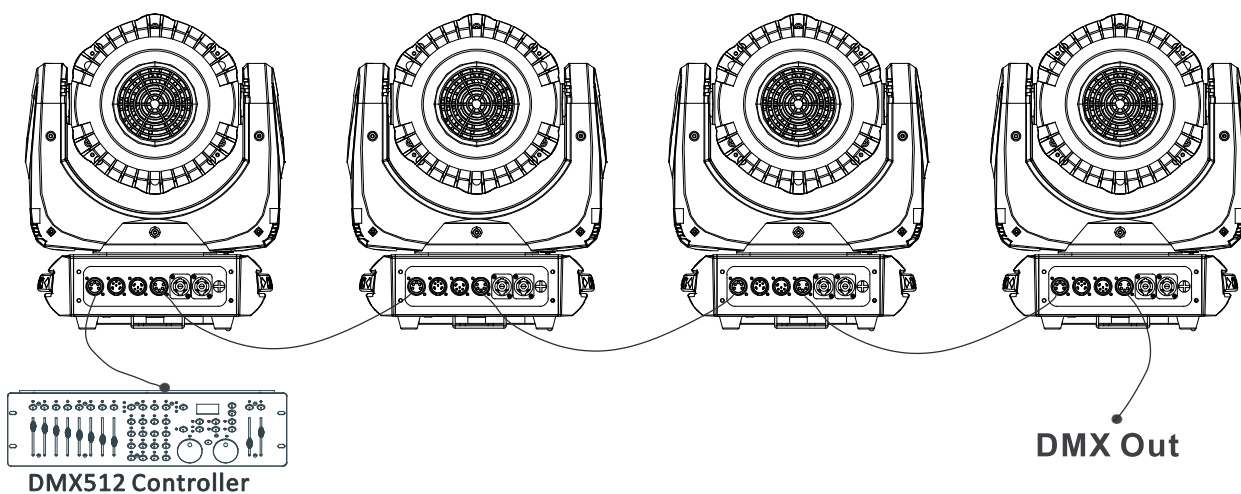

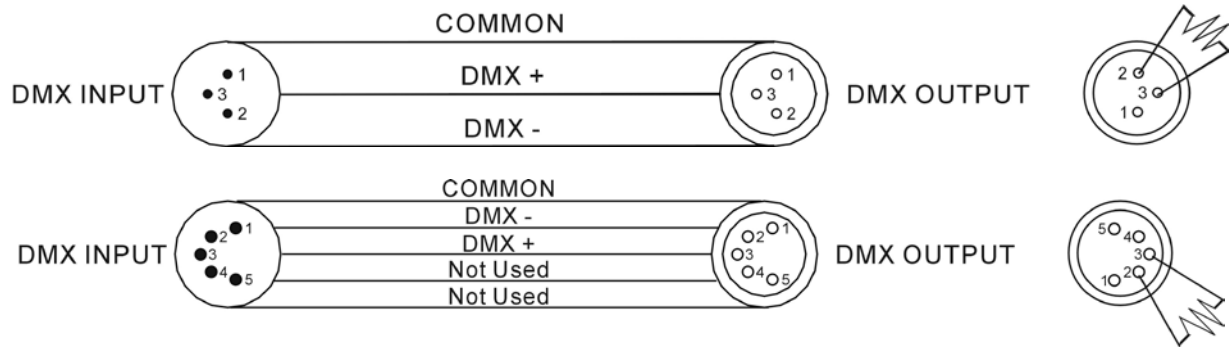

1. If you using a controller with 5 pins DMX output, you need to use a 5 to 3 pin adapter-cable.
2. At last unit, the DMX cable has to be terminated with a terminator. Solder a 120 ohm 1/4W resistor between pin 2(DMX-) and pin 3(DMX+) into a 3-pin XLR-plug and plug it in the DMX-output of the last unit.
3. Connect the unit together in a `daisy chain` by XLR plug from the output of the unit to the input of the next unit. The cable can not branched or split to a `Y` cable. DMX 512 is a very high-speed signal. Inadequate or damaged cables, soldered joints or corroded connectors can easily distort the signal and shut down the system.
4. The DMX output and input connectors are pass-through to maintain the DMX circuit, when one of the units' power is disconnected.
5. Each lighting unit needs to have an address set to receive the data sent by the controller. The address number is between 0-511 (usually 0 & 1 are equal to 1).
6. The end of the DMX 512 system should be terminated to reduce signal errors.
7. 3 pin XLR connectors are more popular than 5 pin XLR.
  - 3 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)
  - 5 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+), Pin 4/Pin 5: Not used.

## 4.2 Address Setting

If you use a universal DMX controller to control the units, you have to set DMX address from 1 to 512 so that the units can receive DMX signal.

Press **MENU** button to enter menu mode, select **DMX Functions**, press the **ENTER** button to confirm, use the **UP/DOWN** button to select **DMX Address**, press the **ENTER** button to confirm, the present address will blink on the display, use the **UP/DOWN** button to adjust the address from

001 to 512, and press the **ENTER** button to store. Press the **MENU** button back to the last menu or let the unit idle 7 seconds to exit menu mode.

Please refer to the following diagram to address your DMX512 channel for the first 4 units:

Channel mode	Unit 1 Address	Unit 2 Address	Unit 3 Address	Unit 4 Address
11 channels	1	12	33	44
15 channels	1	16	31	46
14 channels	1	15	29	43

### 4.3 DMX 512 Configuration

**11CH MODE (MODE 1):**

CHANNEL	VALUE	FUNCTION
<b>1</b>		<b>PAN</b>
	000 – 255	0° - 540°
<b>2</b>		<b>TILT</b>
	000 – 255	0° - 220°
<b>3</b>	000 – 255	<b>PAN/TILT SPEED</b>
<b>4</b>		<b>SHUTTER:</b>
	000 – 019	Off
	020 – 024	Open
	025 – 064	Strobe: Fast → Slow
	065 – 069	Open
	070 – 084	Pulse, fast close slow open
	085 – 089	Open
	090 – 104	Pulse, fast open slow close
	105 – 109	Open
	110 – 124	Dimmer macro random strobe
	125 - 129	Open
	130 – 144	Dimmer macro random fast close slow open
	145 - 149	Open
	150 – 164	Dimmer macro random fast open slow close



	165 - 169	Open
	170 - 184	Dimmer macro burst pulse
	185 - 189	Open
	190 - 204	Dimmer macro random burst pulse
	205 - 209	Open
	210 - 224	Dimmer macro slow close slow open
	225 - 229	Open
	230 - 244	Dimmer macro burst little
	245 - 255	Open
<b>5</b>	000 - 255	<b>RED: 0% - 100%</b>
<b>6</b>	000 - 255	<b>GREEN: 0% - 100%</b>
<b>7</b>	000 - 255	<b>BLUE: 0% - 100%</b>
<b>8</b>	000 - 255	<b>WHITE: 0% - 100%</b>
<b>9</b>	000 - 255	<b>DIMMER: 0% - 100%</b>
<b>10</b>	000 - 255	<b>ZOOM: 0% - 100%</b>
<b>11</b>		<b>SPECIAL FUNCTION:</b>
	000 - 009	Null
	010 - 014	Reset All
	015 - 255	Null

**15CH MODE (MODE 2):**

CHANNEL	VALUE	FUNCTION
<b>1</b>		<b>SHUTTER:</b>
	000 - 019	Off
	020 - 024	Open
	025 - 064	Strobe: Fast → Slow
	065 - 069	Open
	070 - 084	Pulse, fast close slow open
	085 - 089	Open
	090 - 104	Pulse, fast open slow close
	105 - 109	Open
	110 - 124	Dimmer macro random strobe
	125 - 129	Open

	130 – 144	Dimmer macro random fast close slow open
	145 - 149	Open
	150 – 164	Dimmer macro random fast open slow close
	165 - 169	Open
	170 – 184	Dimmer macro burst pulse
	185 - 189	Open
	190 – 204	Dimmer macro random burst pulse
	205 - 209	Open
	210 - 224	Dimmer macro slow close slow open
	225 - 229	Open
	230 - 244	Dimmer macro burst little
	245 - 255	Open
<b>2</b>	000 – 255	<b>DIMMER: 0% - 100%</b>
<b>3</b>	000 – 255	<b>ZOOM: 0% - 100%</b>
<b>4</b>		<b>PAN</b>
	000 – 255	0° - 540°
<b>5</b>	000 – 255	<b>PAN FINE</b>
<b>6</b>		<b>TILT</b>
	000 – 255	0° - 220°
<b>7</b>	000 – 255	<b>TILT FINE</b>
<b>8</b>	000 – 255	<b>PAN/TILT SPEED</b>
<b>9</b>		<b>SPECIAL FUNCTION:</b>
	000 - 009	Null
	010 - 014	Reset All
	015 - 255	Null
<b>10</b>		<b>Color</b>
	000 – 009	Open
	010 – 014	Color 1
	015 – 019	Color 2
	020 – 024	Color 3
	025 – 029	Color 4
	030 – 034	Color 5
	035 – 039	Color 6
	040 – 044	Color 7
	045 – 049	Color 8
	050 – 054	Color 9
	055 – 059	Color 10

	060 – 064	Color 11
	065 – 069	Color 12
	070 – 074	Color 13
	075 – 079	Color 14
	080 – 084	Color 15
	085 – 089	Color 16
	090 – 094	Color 17
	095 – 099	Color 18
	100 – 104	Color 19
	105 – 109	Color 20
	110 – 114	Color 21
	115 – 119	Color 22
	120 – 124	Color 23
	125 – 129	Color 24
	130 – 134	Color 25
	135 – 139	Color 26
	140 – 144	Color 27
	145 – 149	Color 28
	150 – 154	Color 29
	155 – 159	Color 30
	160 – 164	Color 31
	165 – 169	Color 32
	170 – 174	Color 33
	175 – 179	Open
	180 - 201	CCW Rotation : fast → slow
	202 – 207	Stop
	208 – 229	CW Rotation: slow → fast
	230 – 234	Open
	235 – 239	Random color rotation (fast speed)
	240 – 244	Random color rotation (medium speed)
	245 – 249	Random color rotation (slow speed)
	250 - 255	Open
<b>11</b>	000 – 255	<b>RED:</b> 0% - 100%
<b>12</b>	000 – 255	<b>GREEN:</b> 0% - 100%
<b>13</b>	000 – 255	<b>BLUE:</b> 0% - 100%
<b>14</b>	000 – 255	<b>WHITE:</b> 0% - 100%
<b>15</b>	000 – 255	<b>CTC:</b> 0% - 100%

**14CH MODE (MODE 3):**

CHANNEL	VALUE	FUNCTION
1		<b>PAN</b>
	000 – 255	0° - 540°
2	000 – 255	<b>PAN FINE</b>
3		<b>TILT</b>
	000 – 255	0° - 220°
4	000 – 255	<b>TILT FINE</b>
5	000 – 255	<b>PAN/TILT SPEED</b> Fast → Slow
6		<b>RESET</b>
	000-009	No Function
	010-014	Reset All
	015-255	No Function
7		<b>DIMMER</b>
	000 – 255	0% - 100%
8		<b>SHUTTER:</b>
	000 – 019	Off
	020 – 024	Open
	025 – 064	Strobe: Fast → Slow
	065 – 069	Open
	070 – 084	Pulse, fast close slow open
	085 – 089	Open
	090 – 104	Pulse, fast open slow close
	105 – 109	Open
	110 – 124	Dimmer macro random strobe
	125 - 129	Open
	130 – 144	Dimmer macro random fast close slow open
	145 - 149	Open
	150 – 164	Dimmer macro random fast open slow close
	165 - 169	Open
	170 – 184	Dimmer macro burst pulse

	185 - 189	Open
	190 – 204	Dimmer macro random burst pulse
	205 - 209	Open
	210 - 224	Dimmer macro slow close slow open
	225 - 229	Open
	230 - 244	Dimmer macro burst little
	245 - 255	Open
<b>9</b>	000 – 255	<b>RED: 0% - 100%</b>
<b>10</b>	000 – 255	<b>GREEN: 0% - 100%</b>
<b>11</b>	000 – 255	<b>BLUE: 0% - 100%</b>
<b>12</b>	000 – 255	<b>WHITE: 0% - 100%</b>
<b>13</b>		<b>COLOR MACRO</b>
	000-009	Open
	010-014	LEE 790 – Moroccan Pink
	015-019	LEE 157 – Pink
	020-024	LEE 332 – Special Rose Pink
	025-029	LEE 328 – Follies Pink
	030-034	LEE 345 – Fuchsia Pink
	035-039	LEE 194 – Surprise Pink
	040-044	LEE 181 – Congo Blue
	045-049	LEE 071 – Tokyo Blue
	050-054	LEE 120 – Deep Blue
	055-059	LEE 079 – Just Blue
	060-064	LEE 132 – Medium Blue
	065-069	LEE 200 – Double CT Blue
	070-074	LEE 161 – State Blue
	075-079	LEE 201 – Full CT Blue
	080-084	LEE 202 – Half CT Blue
	085-089	LEE 117 – Steel Blue
	090-094	LEE 353 – Lighter Blue
	095-099	LEE 118 – Light Blue
	100-104	LEE 116 – Medium Blue Green
	105-109	LEE 124 – Dark Green
	110-114	LEE 139 – Primary Green
	115-119	LEE 089 – Moss Green
	120-124	LEE 122 – Fern Green
	125-129	LEE 738 – JAS Green
	130-134	LEE 088 – Lime Green
	135-139	LEE 100 – Spring Yellow
	140-144	LEE 104 – Deep Amber
	145-149	LEE 179 – Chrome Orange
	150-154	LEE 105 – Orange

	155-159	LEE 021 – Gold Amber
	160-164	LEE 778 – Millennium Gold
	165-169	LEE 135 – Deep Gold Amber
	170-174	LEE 164 – Flame Red
	175-179	Open
		<b>Color wheel rotation effect</b>
	180-201	Clockwise, fast → slow
	202-207	Stop (this will stop wherever the color is at the time)
	208-229	Counter-clockwise, slow → fast
	230-234	Open
		<b>Random color</b>
	235-239	Fast
	240-244	Medium
	245-249	Slow
	250-255	Open
<b>14</b>	000 – 255	<b>ZOOM: 0% - 100%</b>

## 5. Troubleshooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

### A. The unit does not work, no light and the fan does not work

1. Check the connection of power and main fuse.
2. Measure the mains voltage on the main connector.
3. Check the power on LED.

### B. Not responding to DMX controller

1. DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
2. If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
3. If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the unit or the previous one.
4. Try to use another DMX controller.
5. Check if the DMX cables run near or run alongside to high voltage cables that may cause

damage or interference to DMX interface circuit.

### **C. One of the channels is not working well**

1. The stepper motor might be damaged or the cable connected to the PCB is broken.
2. The motor's drive IC on the PCB might be out of condition.

## **6. Fixture Cleaning**

The cleaning must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every 30 days.

## **Declaration of Conformity**

We declare that our products (lighting equipments) comply with the following specification and bears CE mark in accordance with the provision of the Electromagnetic Compatibility (EMC) Directive 2004/108/EC.

EN55103-1: 2009 ; EN55103-2: 2009;  
EN61000-3-2: 2006 + A1:2009 + A2:2009; EN61000-3-3: 2008.

**&**

## **Harmonized Standard**

EN 60598-1:2008 + All:2009; EN 60598-2-17:1989 + A2:1991;  
EN 62471:2008; EN 62493: 2010  
Safety of household and similar electrical appliances  
Part 1: General requirements

**Innovation, Quality, Performance**