

## **BUILDING PROJECTOR**

**BP-1 83 RGBW S DXX**

**User Manual**

Please read the instructions carefully before use

**Innovation, Quality, Performance**

## CONTENT

1. Safety Instructions .....	2
2. Technical Specifications.....	4
3. How To Set The Fixture .....	6
4. How To Control The Fixture .....	14
6. Troubleshooting .....	16
7. Cleaning And Maintenance.....	17

## Declaration of Conformity

We declare that our products (lighting equipments) comply with the following specification and bears CE mark in accordance with the provision of the Electromagnetic Compatibility (EMC) Directive 89/336/EEC.

EN55103-1: 2009 ; EN55103-2: 2009; EN62471: 2008;  
EN61000-3-2: 2006 + A1:2009 + A2:2009; EN61000-3-3: 2008.

**&**

## Harmonized Standard

EN60598-2-17:1989 + A2:1991; EN60598-1:2008+ A11: 2009

EN 62471:2008; EN 62493: 2010

Safety of household and similar electrical appliances

Part 1: General requirements

sent by the controller. The address number is between 0–511 (usually 0 & 1 are equal to 1).

5. The end of the DMX 512 system should be terminated to reduce signal errors.

6. 3 pin XLR connectors are more popular than 5 pin XLR.

3 pin XLR: Pin 1: GND, Pin 2: Negative signal (–), Pin 3: Positive signal (+)

5 pin XLR: Pin 1: GND, Pin 2: Negative signal (–), Pin 3: Positive signal (+), Pin 4/Pin 5: Not used.

## 6. Troubleshooting

If the fixture does not work, no light, please check the connection of power cable and signal line, also measure the mains voltage on the main connector.

## 7. Cleaning And Maintenance

The cleaning must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: moist, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the fixture.

- Clean with lint-free cloth using normal glass cleaning liquid.
- Always dry the parts carefully.
- Clean the surface at least every 30 days.

## 1. Safety Instructions



WARNING

Please read the instructions carefully which includes important information about the installation, operation and maintenance.

- Please keep this User Guide for future consultation. If you sell the fixture to another user, be sure that they also receive this instruction booklet.



DANGER!  
Safety hazard.  
Risk of severe injury or death.



DANGER!  
Hazardous voltage. Risk of lethal or severe electric shock.



WARNING!  
Fire hazard.



WARNING!  
LED light emission. Risk of eye injury.



WARNING!  
Burn hazard. Hot surface. Do not touch.




WARNING! Refer to user manual.

Cautions:

- All fixtures are intact from the manufacturer, please operate follow up the user manual, artificial fault are not under guarantee repair.
- Please unpack and check carefully there is no transportation damage before using the fixture.
- Please install and operate by qualified technician.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the fixture.
- It's important to ground with yellow/green conductor to earth in order to avoid electric shock.
- Maximum ambient temperature is 40°C. Don't operate it where the temperature is higher than this.

- DO NOT connect the device to any dimmer pack.
- Please make sure there are no flammable materials close to the fixture while operating, as it is fire hazard.
- Please look over power wires carefully, replace immediately if there is any damage.
- Please avoid any inflammable liquids, water or metal objects entering the fixture. Once it happens, cut off the mains power immediately.
- DO NOT operate in dirty and dusty environment, also cleaning fixtures regularly.
- DO NOT allow children to operate the fixture.
- DO NOT touch any wire during operation as there might be a hazard of electric shock.
- In the event of serious operating problem, stop using the fixture immediately.
- DO NOT open the fixture as there are no user serviceable parts inside. Never try to repair the fixture by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center.
- Please disconnect the mains power if the fixture is not used for a long time.
- Please use original packing materials once transport it again.
- DO NOT look directly at the LED light beam while the fixture is on.

## 5. DMX512 Connections

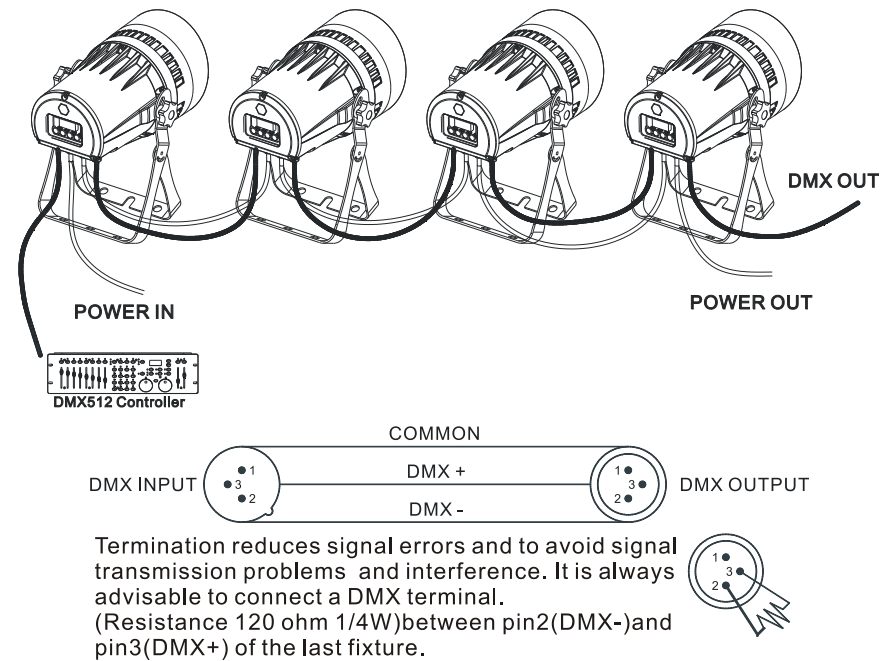

1. If you using a controller with 5 pins DMX output, you need to use a 5 to 3 pin adapter-cable.
2. Connect the unit together in a `daisy chain` by XLR plug from the output of the unit to the input of the next unit. The cable can not branched or split to a `Y` cable. DMX 512 is a very high-speed signal. Inadequate or damaged cables, soldered joints or corroded connectors can easily distort the signal and shut down the system.
3. The DMX output and input connectors are pass-through to maintain the DMX circuit, when one of the units' power is disconnected.
4. Each lighting unit needs to have an address set to receive the data

## 4.2 DMX 512 Configuration

### 4/5/7 Channels Mode:

DMX512 Configurations								
4 Channels Mode				5 Channels Mode				
Ch1	Ch2	Ch3	Ch4	Ch1	Ch2	Ch3	Ch4	Ch5
Red	Green	Blue	White	Red	Green	Blue	White	Dimmer
7 Channels Mode								
Ch1	Ch2	Ch3	Ch4	Ch5	Ch6	Ch7		
Red	Green	Blue	White	Color	Dimmer	Strobe		
				248-255 Preset color32 240-247 Preset color31 232-239 Preset color30 224-231 Preset color29 217-223 Preset color28 209-216 Preset color27 201-208 Preset color26 194-200 Preset color25 186-193 Preset color24 178-185 Preset color23 170-177 Preset color22 163-169 Preset color21 155-162 Preset color20 147-154 Preset color19 140-146 Preset color18 132-139 Preset color17 124-131 Preset color16 116-123 Preset color15 109-115 Preset color14 101-108 Preset color13 093-100 Preset color12 085-092 Preset color11 078-084 Preset color10 070-077 Preset color9 062-069 Preset color8 055-061 Preset color7 047-054 Preset color6 039-046 Preset color5 031-038 Preset color4 024-030 Preset color3 016-023 Preset color2 008-015 Preset color1 001-007 OFF		248-255 OPEN 240-247 RANDOM STROBE 232-239 OPEN 190-231 SLOW CLOSE FAST OPEN 182-189 OPEN 140-181 SLOW OPEN FAST CLOSE 132-139 OPEN 16-131 ⚡ 8-15 OPEN 0-7 OFF		

If using a 230V 50Hz power supply, DO NOT connect in series more than **33** units; use another main supply for the next 33 fixtures.


If using a 120V 60Hz power supply, DO NOT connect in series more than **15** units; use another main supply for the next 15 fixtures.

## 2. Technical Specifications

### Features:

- IP66 rated LED Spotlight with rich, saturated color mixing effect via specially designed lens provides outstanding light output;
- Compact design with great heat ventilation in a rugged die-cast aluminum housing to ensure reliable performance under harsh environments;
- Featuring 18pcs×3W CREE LEDs for excellent color mixing;
- With Photocell (light sensor) feature, units can light up automatically when the environment is getting dark;
- A nice design to put diffusion filter for changing beam angles;
- LED touch-panel display for easy set-up navigation; It also comes with great built-in shows (fade) without DMX control;
- Perfect for illumination of building façade, hotels, landscapes, theme park and more.

- **Input Voltage:** AC 100–240V, 50/60Hz
- **Power Consumption:** 48W
- **LED:** 18 X 3W CREE LEDs  
( R:4 ;G:5 ;B:5 ;W:4 )
- **Beam Angle:** 6°, 15°, 25°, 40°, 60°, 80°
- **Dimension:** 343X208 X162mm
- **Weight:** 4.8Kgs
- **Power Cord Daisy Chain:** 27 Fixtures Max. (230V)  
14 Fixtures Max. (120V)
- **DMX Signal Daisy Chain:** 64 Fixtures Max.

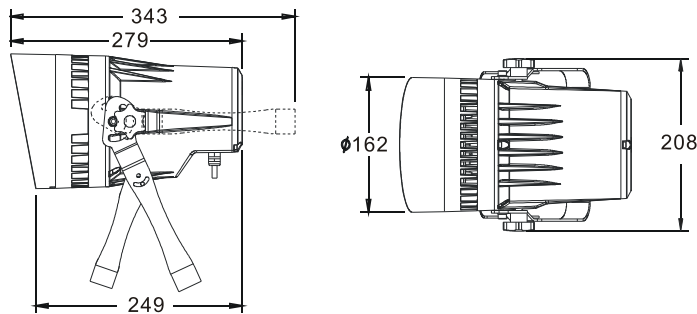

## 4. How To Control The Fixture

You can operate the unit by DMX controller:

No need to turn the unit off when you change the DMX address, as new DMX address setting will be affected at once. The unit will be ready to receive DMX signal or run the built in programs.

### 4.1 DMX Controller

Use universal DMX controller to control the units, you have to set DMX address from 1 to 512 channel so that the units can receive DMX signal.

Press the **MENU** button up to when the **Raddr** is showing on the display. Press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to change the **DMX512** address. Once the address has been selected, press and keep the **ENTER** button pressed up to when the display stops blinking or storing automatically 8 seconds later. To go back to the functions without any change press the **MENU** button again.

Please refer to the following diagram to address your DMX512 channel for the first 4 units:

4 channels mode:	<input type="text" value="1"/>	<input type="text" value="5"/>	<input type="text" value="9"/>	<input type="text" value="13"/>
5 channels mode:	<input type="text" value="1"/>	<input type="text" value="6"/>	<input type="text" value="11"/>	<input type="text" value="16"/>
7 channels mode:	<input type="text" value="1"/>	<input type="text" value="8"/>	<input type="text" value="15"/>	<input type="text" value="22"/>

Press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to select **ON** (display on) or **OFF** (display off 20 seconds after exit menu) mode. Once select, press the **ENTER** button to setup or exit menu mode without any change after one minute. Back to the functions without any change press the **MENU** button again.

### **TEMP** Temperature Test

Press the **MENU** button up to when the **TEMP** is blinking on the display. Press the **ENTER** button and the display will show the temperature of the unit. To go back to the functions press the **MENU** button again.

### **Fhrs** Fixture Hours


Press the **MENU** button up to when the **Fhrs** is blinking on the display. Press the **ENTER** button and the display will show the number of working hours of the unit. To go back to the functions press the **MENU** button.

### **VER** Software version

Press the **MENU** button up to when the **VER** is blinking on the display. Press the **ENTER** button and the display will show the version of software of the unit. To go back to the functions press the **MENU** button again.

## 3. How To Set The Fixture

### 3.1 Control Panel

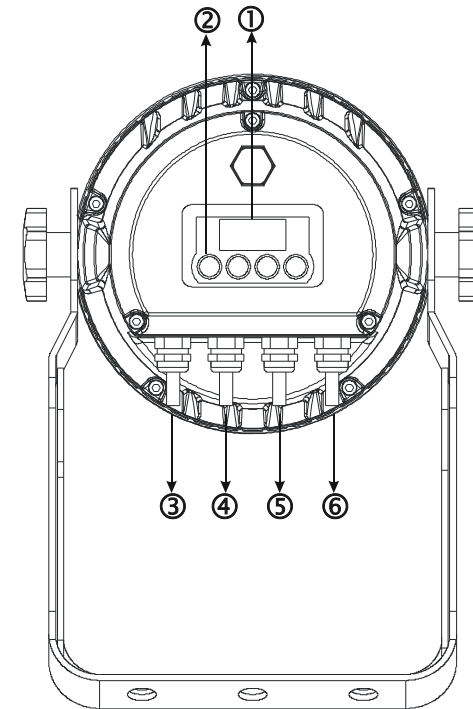

#### 1. Function Display:

Used To show the various menus and the selected functions

#### 2. Button:

<b>MENU</b>	To select the programming functions
<b>▲ DOWN</b>	To go backward in the selected functions
<b>▼ UP</b>	To go forward in the selected functions
<b>ENTER</b>	To confirm the selected functions

### 3. DMX IN:

Water proof cable with 3-pin XLR connectors for DMX 512 operation

### 4. POWER IN:

Water proof power cable with connectors for power input

### 5. POWER OUT:

Water proof cable with connectors for power output

### 6. DMX OUT:

Water proof cable with connectors for DMX 512 operation with 3-pin XLR plug

## 3.2 Main Functions

To select any functions, press the **MENU** button until the required one is shown on the display. Select the function by the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to change the mode. Once the required mode has been selected, press the **ENTER** button to setup or it will automatically return to the main functions without any change after idling one minute. Back to the functions without any change press the **MENU** button.

The main functions are shown below:

### **hour** Time Setup

Select the **hour**, press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to adjust the **0000** (1 hour) ... **0010** (10 hours) mode. Once select, press the **ENTER** button to setup or automatically return to the main functions without any change after one minute. Back to the previous functions press the **MENU** button.

### **DISP** Display Inversion

Press the **MENU** button up to when the **DISP** is showing on the display. Pressing the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to select the **000** (normal) or **0FF** (inverse), Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after one minute. To go back to the previous functions without any change press the **MENU** button.

### **TEST** Auto Test

Select the **TEST**, press the **ENTER** button and the unit will run self-test by built-in program. To go back to the functions press the **MENU** button again.

### **LED** LED Display

Press the **MENU** button up to when the **LED** is shown on the display.



## **WALW** White Balance


Press the **MENU** button up to when the **WALW** is showing on the display. Pressing the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to select the **RED** (Red), **GRN** (Green), or **BLU** (Blue) mode. Once selected, press the **ENTER** button to setup, then use the **DOWN** and **UP** button to adjust the value (125~255) or automatically exit menu mode without any change after one minute. To go back to the functions without any change press the **MENU** button.

## **PECL** Photo Cell

Select the **PECL**, press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to select the **ON** (Be controlled by sunlight) or **OFF** (Not be controlled by sunlight), Once select, press the **ENTER** button to setup or automatically return to the main functions without any change after one minute. Back to the previous functions press the **MENU** button.

## **SENS** Photo Cell Intensity

Select the **SENS**, press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to adjust the intensity vale between **000** and **100**. Once selected, press the **ENTER** button to setup or automatically return to the main functions without any change after one minute. Back to the previous functions press the **MENU** button.

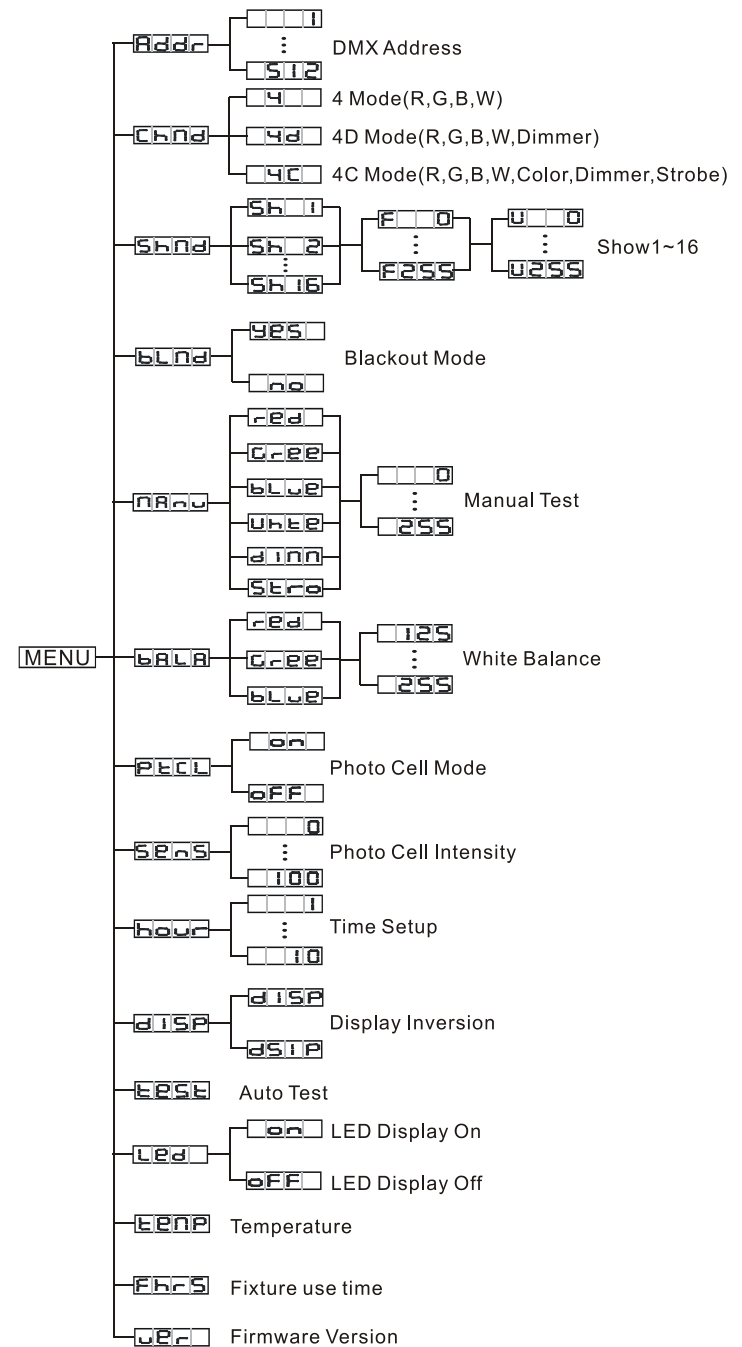

## **Addr** DMX 512 Address

Select the **Addr**, press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to change the DMX 512 address between 1 and 512. Once the address has been selected, press the **ENTER** button to save or automatically exit menu mode without any change after one minute. Back to the previous functions without any change press the **MENU** button.

## **Chan** Channel mode

Select the **Chan**, press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to select the **4** (4 Channels: Red, Green, Blue, White), **4d** (5 Channels: Red, Green, Blue, White, Dimmer) or **4C** (7 Channels: Red, Green, Blue, White, Color, Dimmer, Strobe) Mode. Once select the required mode, press the **ENTER** button to save or automatically exit menu mode without any change after one minute. To go back to the functions without any change press the **MENU** button.

## **Show** Show mode

Select the **Show**, press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to select the **SH01** (show 1)... **SH16** (show 16). Once select, press the **ENTER** button to setup. press the **ENTER** button, **0000** will blinking on the display, use the **DOWN** and **UP** button adjust the fade time (0~255), press the **ENTER** button to store

and **0000** will blinking on the display, use the **DOWN** and **UP** button adjust the white time (0~255), press the **ENTER** button to store or automatically return to the main functions without any change after one minute. To go back to the previous functions without any change press the **MENU** button.

## **BLND** Blackout mode

Select the **BLND**, press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to select the **995** (blackout) or **000** (normal). Once selected, press the **ENTER** button to setup or automatically exit menu mode without any change after one minute. To go back to the functions without any change press the **MENU** button.

## **MANU** Manual Mode

Press the **MENU** button up to when the **MANU** is shown on the display. Press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to select the **RED** (Red), **GRN** (Green), **BLU** (Blue), **WHT** (White), **DMR** (Dimmer) or **STR** (Strobe). Once selected, press the **ENTER** button to setup, then use the **DOWN** and **UP** button to adjust the value (0~255) or automatically exit menu mode without any change after one minute. To go back to the functions without any change press the **MENU** button.